

Smart Charger SC1HR

Operating Instructions

EN

CHARGE INDICATOR LIGHTS


- Red Charging
- Green Charging complete
- Blinking Red Replace batteries

HOW TO CHARGE

1. Place 2 or 4 AA, or 2 or 4 AAA size, NiMH rechargeable batteries into the charger so that the + (positive) and - (negative) ends (terminals) of the batteries correspond to the same + and - markings in the charger.

CAUTION: Do not use AA and AAA size batteries in the charger at the same time.

When charging only 2 batteries, insert them together into either the left or right side of the charger.

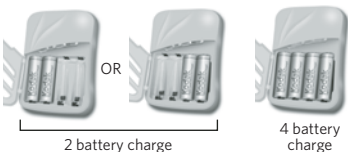

2. Plug the charger into a power outlet. The charge indicator light is illuminated and battery charging begins. (NOTE: Do not insert or remove batteries during this charging process.) See Specifications for charging time.

After charging, the charger will regularly check battery voltage and turn on when needed to maintain a full charge.

Recommended Temperature Ranges

To charge the batteries:
32 to 95°F (0 to 35°C)

To store the batteries:
-13 to 140°F (-10 to 60°C)
41 to 59°F (5 to 15°C) — ideal

To use (discharge) the batteries:
32 to 122°F (0° to 50°C)

Pre-charged NiMH batteries must be stored in a cool, dry location.

Using the batteries outside the temperature ranges may shorten battery life and decrease efficiency.

TIPS

- For best performance, use only KODAK NiMH Batteries.
- Charge the batteries before using (unless using pre-charged batteries).
- Do not use charged and discharged batteries together.

SPECIFICATIONS

Input	100-240 V AC 50/60 Hz 13 W
Output	(2 AA) DC 2.8 V - 2.2 A (4 AA) DC 2.8 V - 1.1 A (2 AAA) DC 2.8 V - 0.9 A (4 AAA) DC 2.8 V - 0.45 A

Battery/Approx. Charge Times

AA mAh	Time (hrs.)	AAA mAh	Time (hrs.)
2700	1.4	2 AAA:	
2600	1.4	1000	1.3
2500	1.3	900	1.1
2100	1.1	850	1.1
1800	1	4 AAA:	
1700	0.9	1000	2.6
		900	2.3
		850	2.1

IMPORTANT SAFETY

INSTRUCTIONS—

Save These Instructions

- **DANGER—TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS.**
- **DANGER—CHARGE ONLY BATTERIES SPECIFICALLY MARKED AS RECHARGEABLE. OTHER TYPES OF BATTERIES MAY LEAK, RUPTURE, OR EXPLODE AND CAUSE PERSONAL INJURY AND DAMAGE.**
- **CAUTION: Keep dry. Do not use extension cords with this product. Do not operate charger if it has been subjected to electrical or physical shock or other damage. Do not disassemble charger.**
- For connection to a supply not in the U.S.A., use an attachment plug adapter of the proper configuration for the power outlet. This battery charger is intended to be correctly oriented in a vertical or floor mount position.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- It is normal for batteries to become warm while charging.

SUPPORT

www.kodak.com/go/support
www.kodak.com/go/contact

Regulatory Information

FCC compliance and advisory

This device complies with part 15 of the FCC Rules. Operation is subject to the following two

conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


This equipment generates, uses, and can radiate radio frequency energy and, if not installed or used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: (1) reorient or relocate the receiving antenna; (2) increase the separation between the equipment and the receiver; (3) connect the equipment to an outlet on a circuit different from that to which the receiver is connected; (4) consult the dealer or an experienced radio/TV technician for additional suggestions.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Where shielded interface cables have been provided with the product or specified additional components or accessories elsewhere defined to be used with the installation of the product, they must be used in order to ensure compliance with FCC regulation.

Canadian DOC statement

DOC Class B compliance—This Class B digital apparatus complies with Canadian ICES-003.

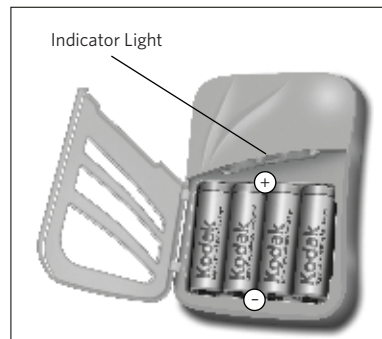

Kodak

Made in China for
EASTMAN KODAK COMPANY
Rochester, New York 14650 U.S.A.
© Eastman Kodak Company, 2010.
MC/MR/TM: Kodak.