

Thank you for purchasing the KODAK Solar Charger KS100. Please read these instructions for safe operation.

Features

- Charges 2 AA Ni-MH batteries at a time using solar energy or USB Power.
- Charges mobile devices (for example, digital cameras, iPods, mobile phones, iPhone/Blackberry) through USB Connection.
- Has built-in reverse polarity protection.

Operating Instructions

CHARGING THE SOLAR CHARGER

1. Place 2 AA size batteries into the charger so that the + (positive) and - (negative) ends (terminals) of the batteries correspond to the same + and - markings in the charger.
NOTE: For best performance, use only KODAK Ni-MH Batteries.
2. Move the switch at the side of the charger to the IN position.
3. Place the charger with its solar panel facing the energy source directly. The charge indicator light is illuminated and battery charging begins.
4. This is a continuous charging charger. The RED light remains ON during charging.
5. Be careful when removing the batteries immediately after charging. The temperature of batteries can be high.
6. See the specification table below for the charge times.

CHARGING YOUR DIGITAL DEVICE ON THE GO

- NOTE: Your solar charger does not have to be fully charged to power your digital device.
1. Connect your USB device's cable (not included) to the solar charger and your digital device.
 2. Move the switch at the side of the charger to the OUT position. The charge indicator light is illuminated and your digital device begins to charge. In most cases, your digital device can be used before it is fully charged.

OPTIONALLY CHARGING THE SOLAR CHARGER VIA USB

1. Place 2 AA size batteries into the charger so that the + (positive) and - (negative) ends (terminals) of the batteries correspond to the same + and - markings in the charger.
NOTE: For best performance, use only KODAK Ni-MH Batteries.
2. Move the switch at the side of the charger to the IN position.
3. Connect the USB cable (provided) to the solar charger and the USB power source (for example, a computer or a KODAK USB AC Adapter).
4. This is a continuous charging charger. The RED light remains ON during charging.
5. See the specification table below for the USB charge time.

Specifications:

Power Supply	Input	USB: 5.0 V DC, 500 mA Solar: 90 mA max.
	Charge current to Batteries	20-90 mA via Solar or 2.4 V DC, 180 mA via USB
	Output	USB: 5.0 V DC, 300 mA
LED Indication:	Switch position	Status
	Red	In Charging
	Green	Out Sufficient power for charging your mobile device.
	Off	Insufficient sunlight for charging; insufficient power for your mobile device; no batteries in charger.
Operating Temperature	0-45°C	
2 AA Ni-MH Batteries	Via USB Power	Via Bright Sunlight
Charging time* (hours)	14	28
Capacity	2100 mA	
Dimensions (L x W x H)	113 x 56 x 25 mm (4.4 x 2.2 x 1.0 in.)	
Weight	66 g (2.3 oz.)	

*Charging time depends on sunlight conditions, length of exposure and device model.

IMPORTANT SAFETY INSTRUCTIONS—

Save These Instructions

DANGER—TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS.

CAUTION: Charge only Ni-MH AA rechargeable batteries. Other types of batteries may burst, causing personal injury and damage.

- The KS100 charges devices with USB-charging capability.
- The use of an accessory attachment that is not recommended by Kodak may cause fire, electric shock or injury.
- If using this product on an aeroplane, observe all instructions from the airline.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

CAUTION: Do not disassemble this product; there are no user-serviceable parts inside. Refer servicing to qualified service personnel.

CAUTION: Do not expose this product to liquid, moisture or extreme temperatures. KODAK AC Adapters and Battery Chargers are intended for indoor use only. The use of controls, adjustments or procedures other than those specified herein may result in exposure to shock and/or electrical or mechanical hazards.

- Use a damp cloth to clean the surface. Do not immerse in water.
- Do not insert any objects (such as a screwdriver or metal wires) into the charger.
- Keep out of reach of infants. Children may use the charger only under strict parental supervision.

DANGER!

Failure to comply with all of the above warnings may cause electric shock, battery damage/leakage, overheating, explosion or fire and can result in severe personal injury and/or damage to property.

Guarantee: This battery charger and batteries are guaranteed against defects in material and workmanship for one year after date of purchase. Any device damaged by these batteries due to such defect will be repaired or replaced (at our option) if sent with batteries to Kodak. To Claim: In the U.S. and Canada call toll free, 1-888-375-6325 or 1-800-242-2424, between the hours of 9:00a.m. and 8:00p.m. (EST) Monday through Friday for authorization and mailing address. Send charger or batteries prepaid with your address and phone number, copy of proof of purchase and description of usage. Replacement charger or batteries will be mailed prepaid. No cash refunds will be given. Outside the U.S. and Canada, check with your local Kodak house or go to the following URL for a support number in your area: <http://www.kodak.com/include/international.shtml>.

Waste Electrical and Electronic Equipment/Battery Disposal

In Europe: For human/environmental protection, it is your responsibility to dispose of this equipment and batteries at a collection facility established for this purpose (separate from municipal waste). For more information, contact your retailer, collection facility or appropriate local authorities, or visit www.kodak.com/go/recycle. (Product weight: 66 g.)

Regulatory Information

FCC compliance and advisory



This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed or used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: 1) reorient or relocate the receiving antenna; 2) increase the separation between the equipment and the receiver; 3) connect the equipment to an outlet on a circuit different from that to which the receiver is connected; 4) consult the dealer or an experienced radio/TV technician for additional suggestions.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Where shielded interface cables have been provided with the product or specified additional components or accessories elsewhere defined to be used with the installation of the product, they must be used in order to ensure compliance with FCC regulation.

Canadian DOC statement

DOC Class B compliance—This Class B digital apparatus complies with Canadian ICES-003.

Observation des normes-Class B—Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Kodak

Made in China for

EASTMAN KODAK COMPANY

Rochester, New York 14650 U.S.A.

© Eastman Kodak Company, 2009. MC/MR/TM: Kodak. 4H6959

www.kodak.com/go/batteries