
Kodak EasyShare C360 zoom digital camera



User's guide

www.kodak.com

For interactive tutorials, www.kodak.com/go/howto

For help with your camera, www.kodak.com/go/c360support



Eastman Kodak Company
Rochester, New York 14650


© Eastman Kodak Company, 2005


All screen images are simulated.

Kodak, EasyShare, and Retinar are trademarks of Eastman Kodak Company.


P/N 4J3325

Front, top view

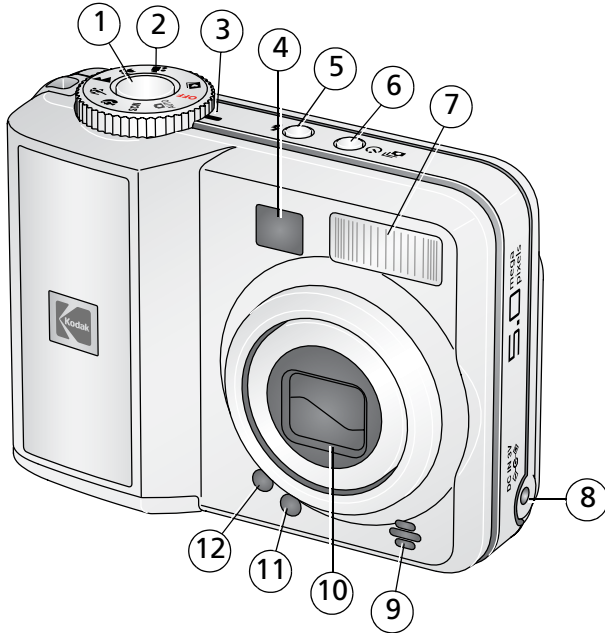

- | | | | |
|---|-------------------------|----|---|
| 1 | Shutter button | 7 | Flash |
| 2 | Mode dial | 8 | DC-In (3V)  , for optional AC adapter |
| 3 | Power light | 9 | Microphone |
| 4 | Viewfinder | 10 | Lens |
| 5 | Flash button | 11 | Light sensor |
| 6 | Self-timer/Burst button | 12 | Self-timer light |

Side, back, bottom view

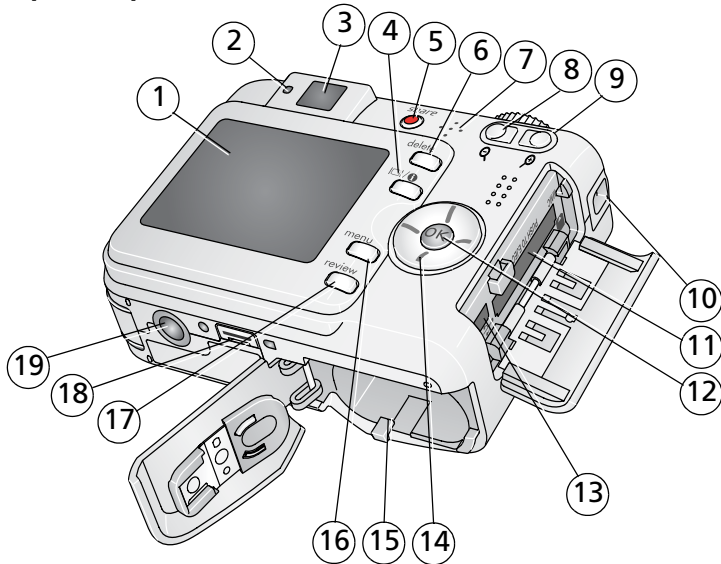

- | | |
|---------------------|-------------------------------------|
| 1 LCD | 11 Slot for optional SD or MMC card |
| 2 Ready light | 12 OK button |
| 3 Viewfinder | 13 USB, A/V Out |
| 4 LCD/Info button | 14 |
| 5 Share button | 15 Battery compartment |
| 6 Delete button | 16 Menu button |
| 7 Speaker | 17 Review button |
| 8 Wide angle button | 18 Dock connector |
| 9 Telephoto button | 19 Tripod socket |
| 10 Wrist strap post | |

Table of contents


1	Setting up your camera	1
	Attaching the wrist strap	1
	Loading the batteries	1
	Turning on the camera	2
	Setting the date/time, first time	2
	Storing pictures on an SD or MMC card	3
2	Taking pictures and videos	4
	Taking a picture	4
	Reviewing pictures and videos on your camera	8
3	Transferring and printing pictures	11
	Installing the software	11
	Transferring pictures with the USB cable	12
	Printing pictures	12
	Dock compatibility for your camera	15
4	Doing more with your camera	16
	Using optical zoom	16
	Changing the flash settings	17
	Picture-taking modes	18
	Using the self-timer	20
	Using burst	21
	Changing picture-taking settings	22
	Customizing your camera	26
	Running a slide show	28
	Cropping pictures	30
	Viewing picture/video information	30
	Copying pictures and videos	30
	Pre-tagging for album names	31
	Sharing your pictures	33

5 Troubleshooting	38
Camera problems.....	38
Computer/connectivity problems.....	40
Picture quality problems	40
Direct printing (PictBridge enabled printer) problems.....	42
6 Getting help	43
Helpful links.....	43
Telephone customer support	44
7 Appendix	45
Camera specifications	45
Storage capacities.....	49
Important safety instructions	49
Battery life	51
Power-saving features.....	52
Upgrading your software and firmware.....	52
Additional care and maintenance	52
Warranty.....	53
Regulatory compliance	55


1

Setting up your camera

Attaching the wrist strap

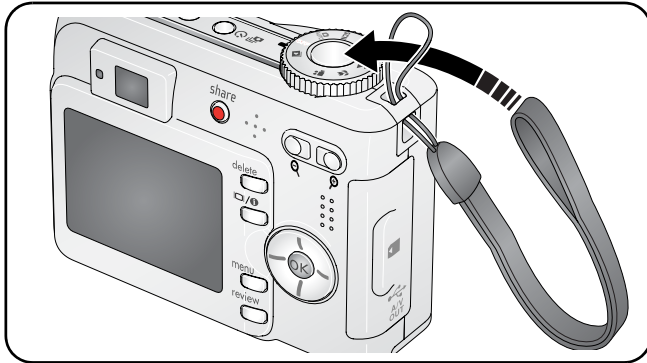

Loading the batteries

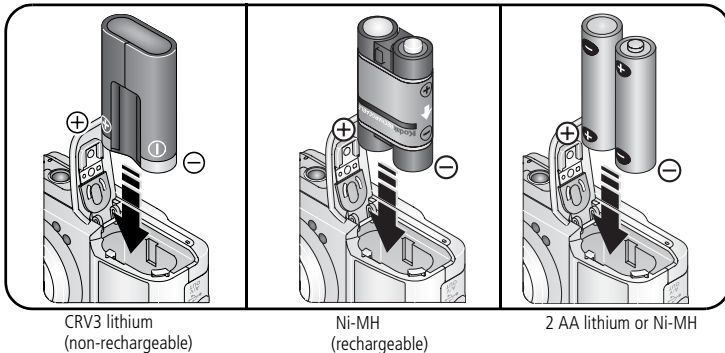


CRV3 lithium
(non-rechargeable)

Ni-MH
(rechargeable)


2 AA lithium or Ni-MH

For information on replacing batteries and extending battery life, see [page 51](#).


Turning on the camera

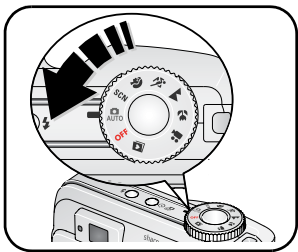

Setting the date/time, first time

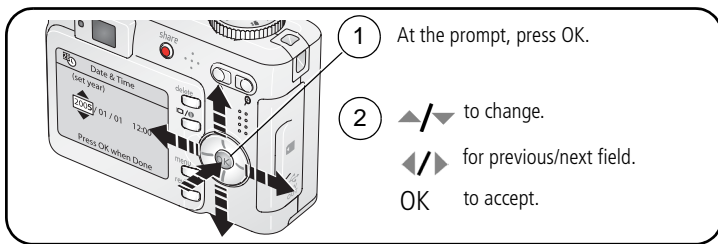

Setting the date/time and language, other times

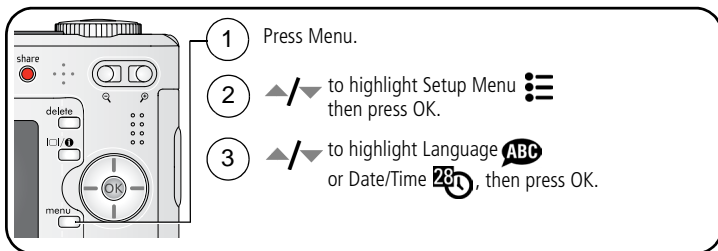


If setting the date/time, $\blacktriangle/\blacktriangleright$ to change, $\blacktriangleleft/\blacktriangleright$ for previous/next, OK to accept.

Storing pictures on an SD or MMC card

Your camera has 32 MB of internal memory. You can purchase an SD or MMC card to conveniently store more pictures and videos.

NOTE: We recommend Kodak SD or MMC cards. When using the card for the first time, format it in this camera before taking pictures (see [page 28](#)).

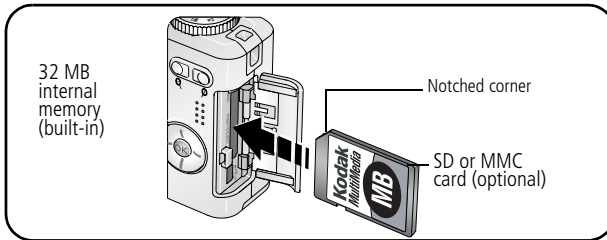

CAUTION:


A card can only be inserted one way; forcing it may cause damage. Inserting or removing a card when the Ready light is blinking may damage the pictures, the card, or the camera.

See [page 49](#) for storage capacities. Purchase SD or MMC cards at a dealer of Kodak products or www.kodak.com/go/c360accessories.


2

Taking pictures and videos

Taking a picture

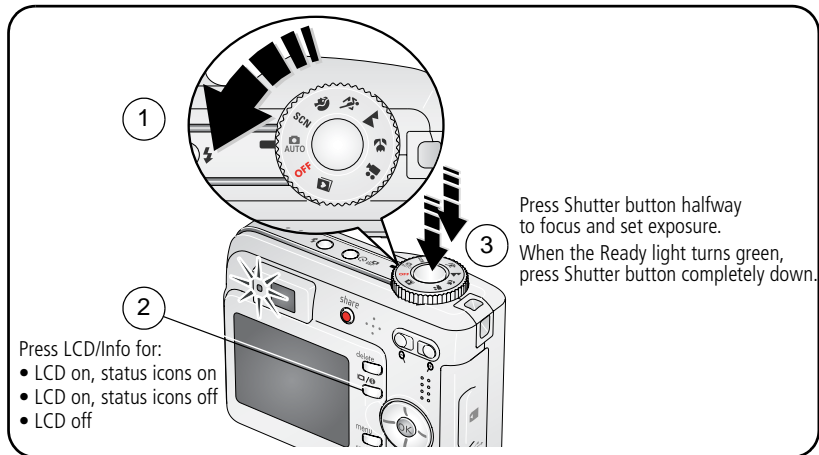


Taking a video

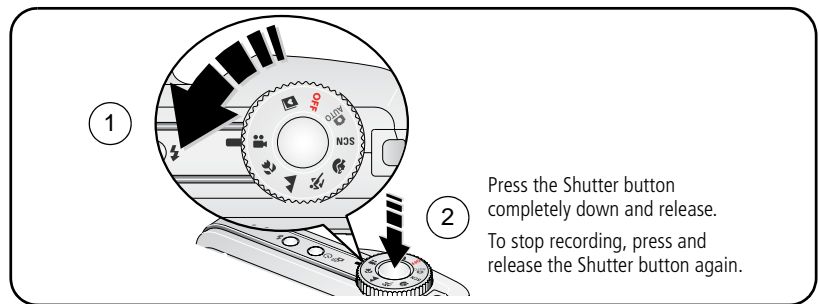

Reviewing the picture or video just taken

After you take a picture or video, the LCD displays a quickview for approximately 5 seconds.

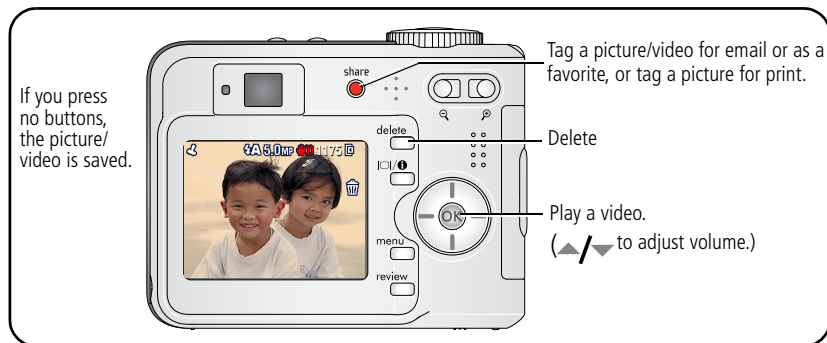

To review pictures and videos anytime, see [page 8](#).

Understanding quickview blur warning icons

If the feature is turned on (see [Blur Warning, page 28](#)), a picture blur warning icon  is displayed during quickview.

Green—Picture is sharp enough for an acceptable 4 x 6-inch print.


Yellow—Picture may be sharp enough for an acceptable 4 x 6-inch print or sharpness is not determined. (You may want to view on a computer monitor before printing.)

Red—Picture is not sharp enough for an acceptable 4 x 6-inch print.


White—Printability is still being determined.

Understanding picture-taking icons

In capture mode—no buttons pressed

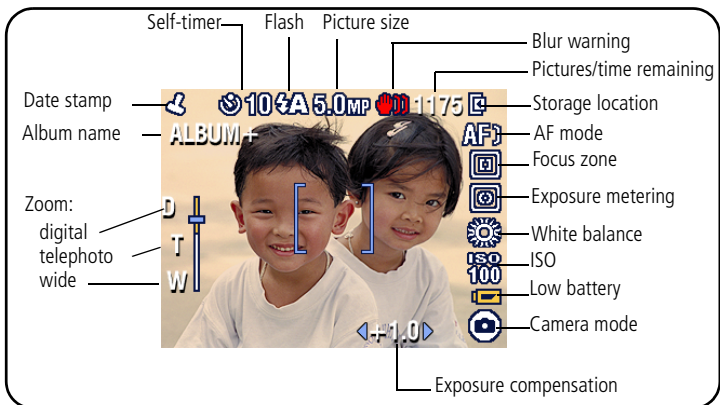

In capture mode—shutter pressed halfway

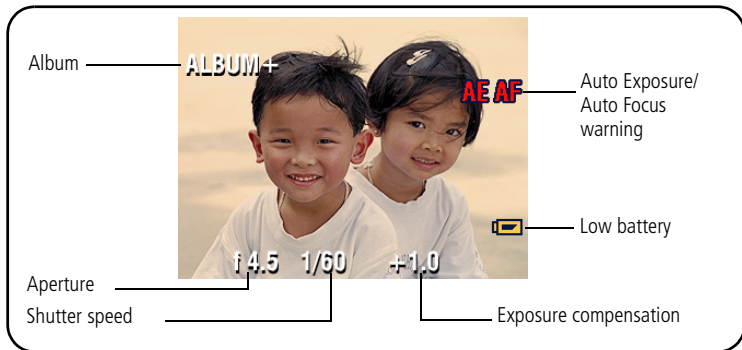


Using the auto-focus framing marks (to take pictures)

When using the LCD as a viewfinder, framing marks indicate the camera focus area. The camera attempts to focus on foreground subjects, even if the subjects are not centered in the scene.

- 1 Press the Shutter button **halfway**.

When the framing marks turn green, focus is accomplished.

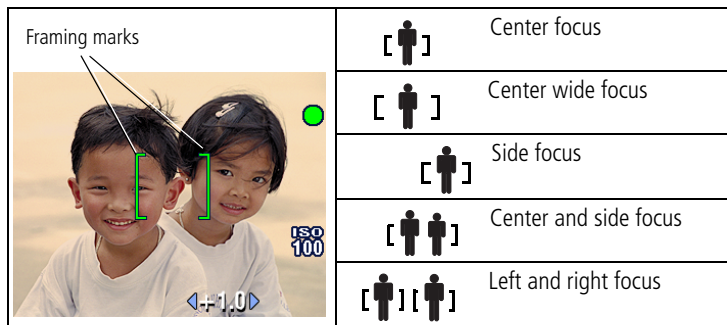


- 2 If the camera is not focusing on the desired subject (or if the framing marks disappear), release the Shutter button and recompose the scene.
- 3 Press the Shutter button **completely down** to take the picture.

NOTE: Framing marks do not appear in Landscape or Video mode. When you use Focus Zone (page 24) and set Center Zone, the framing marks are fixed at Center Wide.

Reviewing pictures and videos on your camera

Press the Review button to view and work with your pictures and videos.

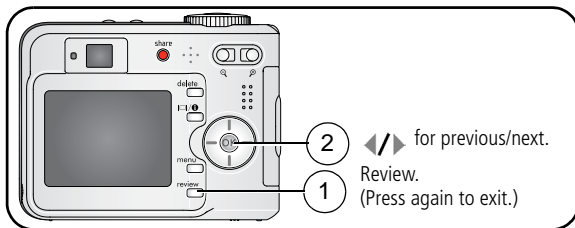

Videos:

OK Play/pause.

▲/▼ Adjust the volume.


◀ Rewind to beginning (during playback).

▶ Next picture/video (during playback).


To save battery power, use an optional Kodak EasyShare dock or Kodak 3-volt AC adapter. (See www.kodak.com/go/c360accessories.)

NOTE: Pictures taken at the 4.4 MP (3:2) quality setting are displayed at a 3:2 aspect ratio with a black bar at the top of the screen. A video's duration is displayed at the top of the LCD.

Magnifying a picture during review

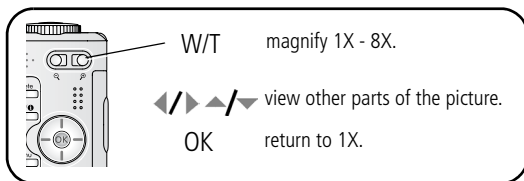


Viewing multi-up (thumbnails) during review

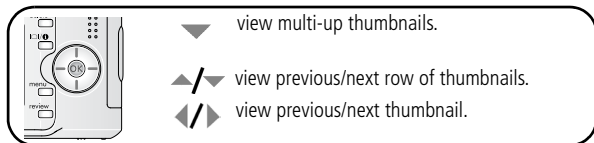


Understanding review icons


Pictures

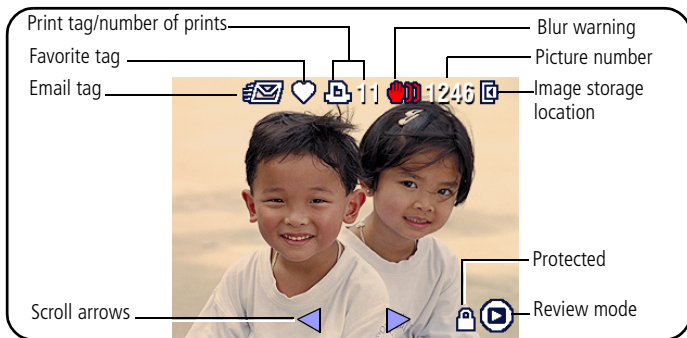

Videos

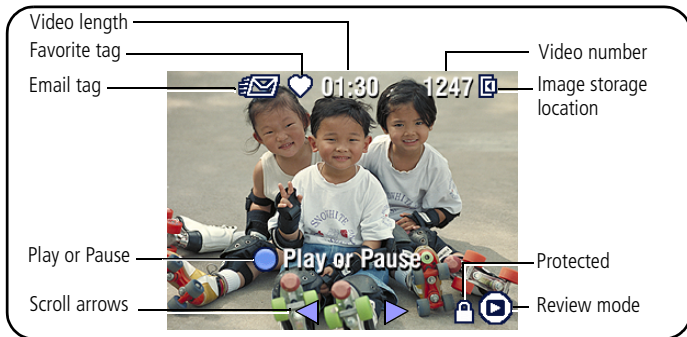



Deleting pictures and videos during review

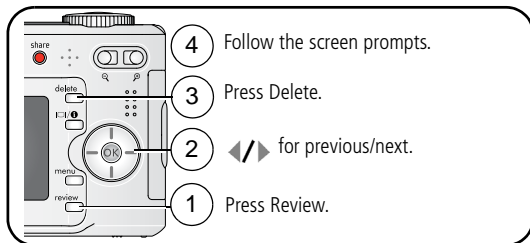

NOTE: To delete protected pictures and videos, remove protection before deleting.

Protecting pictures and videos from deletion

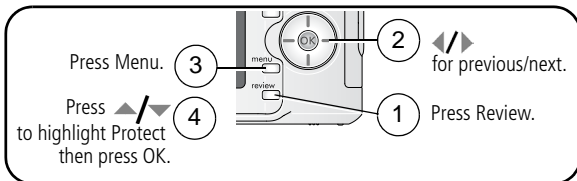

The picture or video is protected and cannot be deleted. The Protect icon  appears with the protected picture or video.

Press the Menu button to exit the menu.



CAUTION:

Formatting internal memory or an SD or MMC card deletes all (including protected) pictures and videos. (Formatting internal memory also deletes email addresses, album names, and favorites. To restore them, see EasyShare software Help.)

3

Transferring and printing pictures

Installing the software



CAUTION:

Install EasyShare software *before* connecting the camera to the computer. Failure to do so may cause the software to load incorrectly.

- 1 Close all software applications that are open on your computer (including anti-virus software).
- 2 Place the EasyShare software CD into the CD-ROM drive.
- 3 Load the software:

Windows OS—if the install window does not appear, choose Run from the Start menu and type **d:\setup.exe** where **d** is the drive letter that contains the CD.

Mac OS X—double-click the CD icon on the desktop, then click the Install icon.

- 4 Follow the on-screen instructions to install the software.


Windows OS—select Complete to automatically install the most commonly used applications, or Custom to choose the ones you wish to install.


Mac OS X—follow the on-screen instructions.

- 5 If prompted, restart the computer. If you turned off anti-virus software, turn it back on. See the anti-virus software manual for details.

For information on the software applications included on the EasyShare software CD, click the Help button in EasyShare software.

Transferring pictures with the USB cable

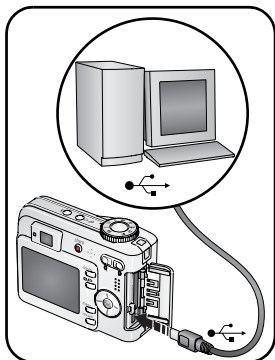

- 1 Turn off the camera.
- 2 Plug the labeled  end of the USB cable into the labeled USB port on your computer. See your computer user's guide for details.
- 3 Plug the other end of the USB cable into the USB port on the camera. The arrow icon on the cable should face you.
- 4 Turn on the camera.

EasyShare software opens on your computer. The software prompts you through the transfer process.

NOTE: Visit www.kodak.com/go/howto for an online tutorial on connecting.

Also available for transferring

You can also use these Kodak products to transfer your pictures and videos.

- Kodak EasyShare camera dock, Kodak EasyShare printer dock (see [page 15](#))
- Kodak multi-card reader, Kodak SD multimedia card reader-writer

Purchase these and other accessories at a dealer of Kodak products or www.kodak.com/go/c360accessories.

Printing pictures

Printing with a Kodak EasyShare printer dock

Dock your camera to the EasyShare printer dock and print directly—with or without a computer. Purchase this and other accessories at a dealer of Kodak products or www.kodak.com/go/c360accessories.

Direct printing with a PictBridge enabled printer

Your camera is compatible with PictBridge technology, so you can print directly to PictBridge enabled printers. You need:

- Camera with fully charged batteries, or with optional Kodak 3-volt AC adapter
- PictBridge enabled printer
- USB cable included with your camera

Connecting the camera to a PictBridge enabled printer

- 1 Turn off the camera and printer.
- 2 Optional: If you have a Kodak 3-volt AC adapter (optional accessory), plug it into the camera and into an electrical outlet.

IMPORTANT: *Do not use the AC adapter included with the EasyShare camera dock or printer dock to power your camera.*

- 3 Connect the appropriate USB cable from the camera to the printer. See your printer user guide for details or www.kodak.com/go/c360accessories to order cables.

Printing from a PictBridge enabled printer

- 1 Turn on the printer. Turn on the camera.

The PictBridge logo is displayed, followed by the current picture and menu. If the menu interface turns off, press any button to redisplay it.

- 2 Press ▲/▼ to choose a printing option, then press the OK button.

Current Picture—Press ◀/▶ to choose a picture. Choose the number of copies.

Tagged Pictures—If your printer is capable, print pictures that you tagged for printing and choose a print size.

Index Print—Print thumbnails of all pictures. This requires one or more sheets of paper. If the printer is capable, choose a print size.

All Pictures—Print all pictures in internal memory, on a card, or in Favorites. Choose the number of copies.

Image Storage—Access internal memory, a card, or Favorites.

NOTE: During direct printing, pictures are not permanently transferred or saved to the computer or printer.

Disconnecting the camera from a PictBridge enabled printer

- 1 Turn off the camera and printer.
- 2 Disconnect the USB cable from the camera and the printer.

Using a printer that is not PictBridge enabled

For details on printing pictures from your computer, click the Help button in Kodak EasyShare software.

Ordering prints online



Kodak EasyShare gallery (www.kodakgallery.com) is one of the many online print services offered in Kodak EasyShare software. You can easily:

- Upload your pictures.
- Edit, enhance, and add borders to your pictures.
- Store pictures, and share them with family and friends.
- Order high-quality prints, photo greeting cards, frames, and albums—and have them delivered to your door.

Printing from an optional SD or MMC card

- Automatically print tagged pictures when you insert your card into a printer with an SD/MMC slot. See your printer user's guide for details.
- Make prints at an SD/MMC-capable Kodak picture maker. (Contact a location prior to visiting. See www.kodak.com/go/picturemaker.)
- Take the card to your local photo retailer for professional printing.

Dock compatibility for your camera

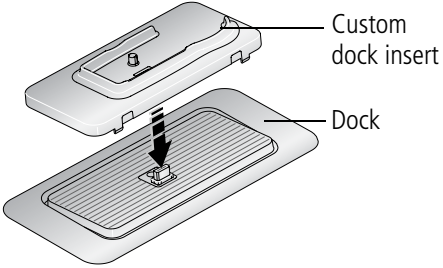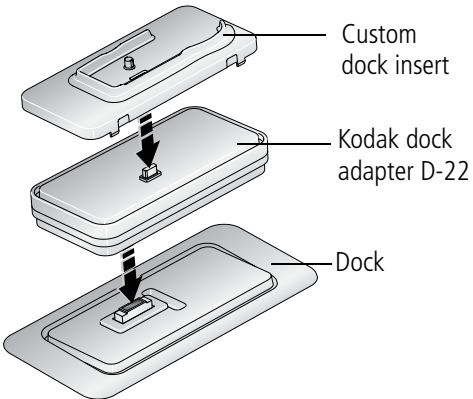Kodak EasyShare dock	Docking configuration
<ul style="list-style-type: none"> ■ series 3 printer docks and camera docks 	 <p>Custom dock insert</p> <p>Dock</p>
<ul style="list-style-type: none"> ■ printer dock ■ printer dock plus ■ printer dock 6000 ■ camera dock 6000 	 <p>Custom dock insert</p> <p>Kodak dock adapter D-22</p> <p>Dock</p>
<ul style="list-style-type: none"> ■ printer dock 4000 ■ camera dock II ■ LS420, LS443 camera dock 	<p>Not compatible</p>


Purchase camera docks, printer docks, and other accessories at a dealer of Kodak products or www.kodak.com/go/c360accessories.

4

Doing more with your camera

Using optical zoom

Use optical zoom to get up to 3X closer to your subject. Optical zoom is effective when the lens is no closer than 24 in. (60 cm) to the subject or 2 in. (5 cm) in Close-up mode. You can change optical zoom before (but not during) video recording.

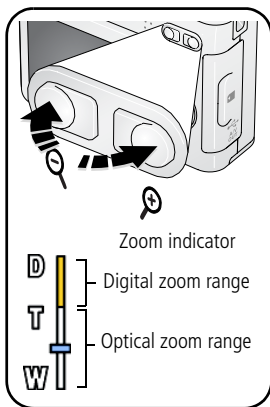

- 1 Use the viewfinder or LCD to frame your subject.
- 2 Press Telephoto (T) to zoom in. Press Wide Angle (W) to zoom out.

The zoom indicator shows zoom status.

- 3 Take the picture or video.


Using digital zoom

Use digital zoom in any Still mode to get up to 5X magnification beyond optical zoom.

- 1 Press the Telephoto (T) button to the optical zoom limit (3X). Release the button, then press it again.
- 2 Take the picture or video.

NOTE: You cannot use digital zoom for video recording. You may notice decreased image quality when using digital zoom. The blue slider on the zoom indicator pauses and turns red when the picture quality reaches the limit for an acceptable 4 x 6-in. (10 x 15 cm) print.

Changing the flash settings

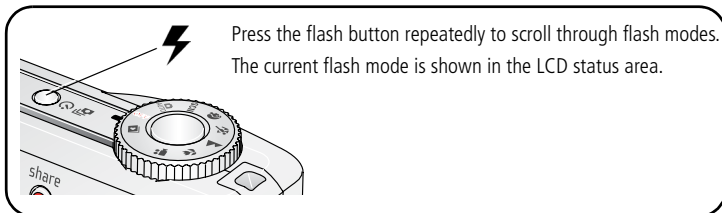


Flash modes	Flash fires	
Auto Flash	When the lighting conditions require it.	
Fill	Every time you take a picture, regardless of the lighting conditions. Use when the subject is in shadow or is "backlit" (when the sun is behind the subject). In low light, hold the camera steady or use a tripod.	
Red-eye	<p>If the Red-eye Pre-flash feature is turned off:</p> <ul style="list-style-type: none"> ■ The flash fires once. ■ The camera then automatically corrects red-eye in the picture. 	<p>If the Red-eye Pre-flash feature is turned on:</p> <ul style="list-style-type: none"> ■ The flash fires once so the eyes become accustomed to the flash, then fires again when the picture is taken. ■ The camera then automatically corrects red-eye in the picture.
	To turn the Red-eye Pre-flash feature on/off, see Red-eye Pre-flash, page 27 .	
Off	Never	





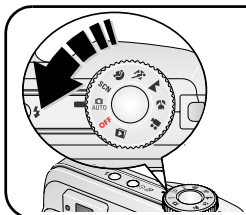

For flash settings in each mode, see [page 47](#).

NOTE: Rear-curtain-flash sync (a feature found only in Night Portrait mode) activates automatically when the flash is fired and the shutter speed is set at 1/30 second or longer. The flash fires just before the shutter closes to create a stream-of-light effect behind a moving object for a more natural appearance.

Picture-taking modes



Choose the mode that best suits your subjects and surroundings.












Use this mode	For
 Auto AUTO	General picture-taking—offers an excellent balance of image quality and ease of use.
SCN Scene	Point-and-shoot simplicity when taking pictures under special conditions. (See Scene modes , page 19.)
 Portrait	Full-frame portraits of people. Allows the subject to be sharp and the background to be indistinct. For best results, position your subject at least 6 ft (2 m) away and fill the frame with a head and shoulder pose. Use Telephoto to exaggerate background blur.
 Sport	Subjects that are in motion. Shutter speed is fast.
 Landscape	Far-away scenes. The camera uses infinity auto-focus. Auto-focus framing marks are not available in Landscape.
 Close-up	Close range. Use available light instead of flash if possible. The camera automatically sets the focus distance depending on the zoom position.
 Video	Capturing video with sound. (See page 4 .)


Scene modes

- 1 Turn the Mode dial to Scene **SCN**.
- 2 Press to display Scene mode descriptions.


NOTE: If the Help text turns off, press the OK button.

- 3 Press the OK button to choose a Scene mode.

Use this SCN mode	For
 Children	Action pictures of children in bright light.
 Party	People indoors. Minimizes red eye.
 Beach	Bright beach scenes.
 Snow	Bright snow scenes.
 Fireworks	Flash does not fire. Place the camera on a flat, steady surface or use a tripod.
 Flower	Close-ups of flowers or other small subjects in bright light.
 Self-Portrait	Close-ups of yourself. Assures proper focus and minimizes red eye.
 Backlight	Subjects that are in shadow or "backlit" (when light is behind the subject).
 Night Portrait	Reduces red eye of people in night scenes or low-light conditions. Place the camera on a flat, steady surface or use a tripod.
 Night Landscape	Distant scenery at night. Flash does not fire. Place the camera on a flat, steady surface or use a tripod.
 Manner/ Museum	Quiet occasions, like a wedding or lecture. Flash and sound are disabled.


Use this SCN mode		For
	Text	Documents.

Using the self-timer

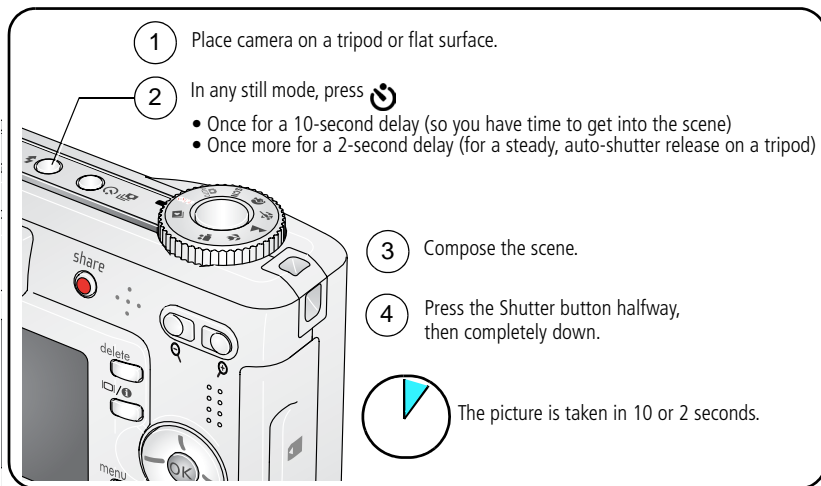


 

 
To cancel the Self-timer before the picture is taken, press the Self-timer button. (The Self-timer setting remains active.)

Use the same procedure to take a video, but:

- Turn the Mode dial to Video .
- Press the Shutter button completely down.

NOTE: The video stops when no storage space remains.

Using burst

Option	Description	Purpose
 <p>First Burst</p>	<p>Camera takes up to 5 pictures (2 per second) while the Shutter button is pressed.</p>  <p>First 5 pictures are saved.</p>	<p>Capture an expected event.</p> <p>Example: A person swinging a golf club.</p>
 <p>Last Burst</p>	<p>Camera takes up to 30 pictures (2 per second for up to 15 seconds) while the Shutter button is pressed. When the Shutter button is released, only the last 4 pictures are saved.</p>  <p>Last 4 pictures are saved.</p>	<p>Capture an event when the precise timing is uncertain.</p> <p>Example: A child blowing out birthday candles.</p>

- 1 In most Still modes, press the Burst button repeatedly to choose an option.
- 2 Press the Shutter button **halfway** to focus and set exposure.
- 3 Press the Shutter button **completely down and hold it** to take pictures.

The camera stops taking pictures when you release the Shutter button, when the pictures are taken, or when there is no more storage space.



NOTE: During quickview, you can delete all pictures in the burst series. To delete selectively, do so in Review (see [page 10](#)).



Changing picture-taking settings




You can change settings to get the best results from your camera:


 



- 1 Press the Menu button.
- 2 Press ▲/▼ to highlight a setting, then press the OK button.
- 3 Choose an option, then press the OK button.
- 4 Press the Menu button to exit.


NOTE: Some settings are unavailable in some modes.

Setting	Icon	Options
Exposure Bracketing Determine the best exposure level for your conditions based on your evaluation of 3 pictures. <i>This setting remains until you turn the mode dial.</i>		Off +/- 0.3 +/- 0.7 +/- 1.0 The camera takes 3 pictures—at +, at 0, and at - exposure.
Exposure Compensation Control how much light enters the camera. <i>This setting remains until you turn the mode dial.</i>		-0.2 to +2.0 (in 1/3 increments)

Setting	Icon	Options
<p>Picture Size Choose a picture resolution. <i>This setting remains until you change it.</i></p>		<p>5.0 MP (default)—for printing up to 20 x 30 in. (51 x 76 cm); pictures are highest resolution and largest file size.</p> <p>4.4 MP (3:2)— ideal for printing 4 x 6 in. (10 x 15 cm) prints without cropping. Also for printing up to 20 x 30 in. (51 x 76 cm).</p> <p>4.0 MP— for printing up to 20 x 30 in. (51 x 76 cm); pictures are medium resolution with smaller file size.</p> <p>3.1 MP—for printing up to 11 x 14 in. (28 x 36 cm); pictures are medium resolution with smaller file size.</p> <p>1.8 MP—for printing 4 x 6 in. (10 x 15 cm), emailing, Internet, screen display, or for conserving space.</p>
<p>White Balance Choose your lighting condition. <i>This setting remains until you turn the Mode dial.</i></p>		<p>Auto (default)—automatically corrects white balance. Ideal for general picture taking.</p> <p>Daylight—for pictures in natural lighting.</p> <p>Tungsten—corrects the orange cast of household light bulbs. Ideal for indoor pictures under tungsten or halogen lighting without flash.</p> <p>Fluorescent—corrects the green cast of fluorescent lighting. Ideal for indoor pictures under fluorescent lighting without flash.</p> <p>Open Shade—for pictures in the shade in natural lighting.</p>


Setting	Icon	Options
<p>Exposure Metering Evaluate light levels at specific areas of a scene. <i>This setting remains until you turn the Mode dial.</i></p>		<p>Multi-pattern (default)—evaluates lighting conditions throughout the image to give an optimum picture exposure. Ideal for general picture taking.</p> <p>Center-weight—evaluates the lighting conditions of the subject centered in the viewfinder. Ideal for backlit subjects.</p> <p>Center-spot—similar to Center-weight, except the metering is concentrated on a smaller area of the subject centered in the viewfinder. Ideal when you need an exact exposure of a specific area in the picture.</p>
<p>ISO Speed Control the sensitivity of the camera sensor. <i>This setting remains until you turn the Mode dial.</i></p>	ISO	<p>Auto (default) ISO 80, 100, 200, 400, 800</p>
<p>Focus Zone Select a large or concentrated area of focus. <i>This setting remains until you turn the Mode dial.</i></p>		<p>Multi-zone (default)—evaluates 3 zones to give an even picture focus. Ideal for general picture taking.</p> <p>Center-zone—evaluates the small area centered in the viewfinder. Ideal when precise focus of a specific area in the picture is needed.</p> <p>NOTE: For the best pictures, the camera is set to Multi-zone when in Landscape mode.</p>
<p>AF Control Choose an auto-focus setting. <i>This setting remains until you change it.</i></p>	AF 	<p>Continuous AF—uses external AF sensor and TTL (Through The Lens) AF. Because the camera is always focusing, there is no need to press the Shutter button halfway down to focus.</p> <p>Single AF (default)—uses external AF sensor and TTL-AF when the Shutter button is pressed halfway down.</p>

Setting	Icon	Options
<p>Color Mode Choose color tones. <i>This setting remains until you turn the Mode dial.</i></p>		<p>High Color Natural Color (default) Low Color Black & White Sepia—for pictures with a reddish-brown, antique look. NOTE: EasyShare software also lets you change a color picture to black-and-white or sepia. Unavailable in Video mode.</p>
<p>Sharpness Control picture sharpness. <i>This setting remains until you turn off the camera.</i></p>		<p>High Normal (default) Low</p>
<p>Long Time Exposure Choose how long the shutter stays open. <i>This setting remains until you turn off the camera.</i></p>		<p>0.5, 0.7, 1, 1.5, 2, 3, 4, 6, or 8 seconds</p>
<p>Set Album Choose Album names. <i>This setting remains until you change it. You can apply different Set Album choices to videos and to pictures.</i></p>		<p>On or Off. Pre-select album names before you take pictures or videos. Then, all the pictures or videos you take are tagged with those album names. See page 31.</p>
<p>Image Storage Choose a storage location for pictures/videos. <i>This setting remains until you change it.</i></p>		<p>Auto (default)—the camera uses the card if one is in the camera. If not, the camera uses internal memory. Internal Memory—the camera always uses internal memory, even if a card is installed.</p>




Setting	Icon	Options
Setup Menu Choose additional settings.		See Customizing your camera .









Customizing your camera






Use Setup to customize your camera settings.

- 1 In any mode, press the Menu button.
- 2 Press $\blacktriangle/\blacktriangledown$ to highlight Setup , then press the OK button.
- 3 Press $\blacktriangle/\blacktriangledown$ to highlight the setting you wish to change, then press the OK button.
- 4 Choose an option, then press the OK button.
- 5 Press the Menu button to exit.

NOTE: These settings remain until you change them.

Setting	Icon	Options
Return to previous menu.		
Liveview Change liveview default to on or off. NOTE: In some modes, the LCD turns on even if the liveview option is set to Off. (To turn the LCD on/off any time, press the LCD/Info button.)		On (default) Off
Camera Sounds Choose sound effects		Theme —applies the same sound effect set to all functions. Individual —choose a sound effect for each function.




Setting	Icon	Options
Sound Volume		Off Low (default) Medium High
Auto Power Off Choose inactivity time until camera turns off.		10 minutes (default) 5 minutes 3 minutes 1 minute
Date & Time		See page 2 .
Video Out Choose the regional setting that lets you connect the camera to a television or other external device.		NTSC (default) —used in North America and Japan; most common format. PAL —used in Europe and China.
Orientation Sensor Orient pictures so that they are displayed with the correct side up.		On (default) Off
Red-eye Pre-flash Choose if the Red-eye flash fires automatically before a picture is taken. NOTE: The camera automatically corrects red-eye, even if the Red-eye Pre-flash is set to Off.		On Off (default)
Date Stamp Imprint the date on pictures.		Choose a date option, or turn off the feature. (Default is off.)
Video Date Display Display Date/Time at the start of video playback.		On (default)—choose from date formats. Off

Setting	Icon	Options
Blur Warning		On (default) Off See page 5 .
Language		See page 2 .
Format  CAUTION: Formatting deletes all pictures/videos, including those that are protected. Removing a card during formatting may damage the card.		Memory Card —deletes everything on the card; formats the card. Cancel —exits without making a change. Internal Memory —deletes everything in internal memory including email addresses, album names, and favorites; formats the internal memory.
About View camera information.		

Running a slide show

Use the Slide Show to display your pictures/videos on the LCD. To run a slide show on a television or on any external device, see [page 29](#). To save battery power, use an optional Kodak 3V AC adapter. (Visit www.kodak.com/go/c360accessories.)

Starting the slide show

- 1 Press the Review button, then press the Menu button.
- 2 Press  to highlight Slide Show , then press the OK button.
- 3 Press  to highlight Begin Show, then press the OK button.

Each picture and video is displayed once.

To interrupt the Slide Show, press the OK button.

Changing the slide show display interval

The default interval setting displays each picture for 5 seconds. You can set the display interval from 3 to 60 seconds.

- 1 On the Slide Show menu, press **▲/▼** to highlight Interval, then press the OK button.
- 2 Select a display interval.
To scroll through the seconds quickly, press and hold **▲/▼**.
- 3 Press the OK button.

The interval setting remains until you change it.

Running a continuous slide show loop

When you turn on Loop, the slide show is continuously repeated.

- 1 On the Slide Show menu, press **▲/▼** to highlight Loop, then press the OK button.
- 2 Press **▲/▼** to highlight On, then press the OK button.

The slide show repeats until you press the OK button or until battery power is exhausted. The Loop feature remains until you change it.


Displaying pictures and videos on a television


You can display pictures/videos on a television, computer monitor, or any device equipped with a video input. (Image quality on a television screen may not be as good as on a computer monitor or when printed.)

NOTE: Ensure that the Video Out setting (NTSC or PAL) is correct (see [page 27](#)). The slide show stops if you connect a cable while the slide show is running.

- 1 Connect the audio/video cable (included) from the camera USB, A/V Out port to the television video-in port (yellow) and audio-in port (white). See your television user's guide for details.
- 2 Review pictures/videos on the television.

Cropping pictures

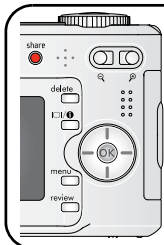


- 1 Press Review.
- 2 ◀/▶ for previous/next.
- 3 Press Menu, choose Crop , then press OK.
- 4 Press Telephoto (T) to zoom in, or ◀/▶ ▲/▼ to move the crop box.
- 5 Follow the screen prompts.

The picture is copied, then cropped. The original picture is saved.

Press the Menu button to exit the menu.

Viewing picture/video information

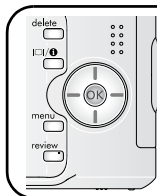

- 1 Press Review.
- 2 Press LCD/Info.

To exit Review, press the Review button.

Copying pictures and videos

You can copy pictures/videos from a card to internal memory or from internal memory to a card.

Before you copy, make sure that:

- A card is inserted in the camera.
- The camera's picture storage location is set to the location **from** which you are copying. See [Image Storage](#), page 25.

Copy pictures or videos:

- 1 Press the Review button, then press the Menu button.
- 2 Press $\blacktriangleleft/\blacktriangleright$ to highlight Copy $\blacktriangleright\blacktriangleright$, then press the OK button.
- 3 Press $\blacktriangleleft/\blacktriangleright$ to highlight an option.
- 4 Press the OK button.

NOTE: Pictures/videos are copied, not moved. To remove pictures/videos from the original location after copying, delete them (see [page 10](#)).

Tags that you applied for print, email, and favorites are not copied. Protection settings are not copied. To apply protection to a picture or video, see [page 10](#).


Pre-tagging for album names

Use the Set Album (Still or Video) feature to pre-select album names before you take pictures or videos. Then, all the pictures or videos you take are tagged with those album names.

First—on your computer

Use the EasyShare software that was packaged with your camera to create album names on your computer. The next time you connect the camera to the computer, copy up to 32 albums to the album name list. See EasyShare software Help for details.

Second—on your camera

- 1 In any mode, press the Menu button.
- 2 Press $\blacktriangleleft/\blacktriangleright$ to highlight Set Album , then press the OK button.
- 3 Press $\blacktriangleleft/\blacktriangleright$ to highlight an album name, then press the OK button. Repeat to mark pictures or videos for albums.

Selected albums are noted with a check mark.

- 4 To remove a selection, highlight an album name and press the OK button. To remove all album selections, select Clear All.

- 5 Highlight Exit, then press the OK button.

Your selections are saved. If you turn on the LCD, your album selection is displayed on the screen. A plus (+) after the album name means more than one album is selected.

- 6 Press the Menu button to exit the menu.

Third—transfer to your computer

When you transfer the tagged pictures or videos to your computer, EasyShare software opens and categorizes your pictures in the appropriate album. See EasyShare software Help for details.


Tagging pictures/videos for albums

Use the Album feature in Review mode to tag the pictures/videos in your camera with album names.

First—on your computer

Use EasyShare software to create albums on your computer, then copy up to 32 album names to the camera's internal memory. See EasyShare software Help for details.

Second—on your camera

- 1 Press the Review button, then locate the picture or video.
- 2 Press the Menu button.
- 3 Press $\blacktriangle/\blacktriangledown$ to highlight Album , then press the OK button.
- 4 Press $\blacktriangle/\blacktriangledown$ to highlight an album folder, then press the OK button.

To add other pictures to the same album, press $\blacktriangle/\blacktriangledown$ to scroll through the pictures. When the picture you want is displayed, press the OK button.

To add the pictures to more than one album, repeat step 4 for each album.

The album name appears with the picture. A plus (+) after the album name means the picture was added to more than one album.




To remove a selection, highlight an album name and press the OK button. To remove all album selections, select Clear All.

Third—transfer to your computer

When you transfer the tagged pictures/videos to your computer, EasyShare software opens and categorizes your pictures/videos in the appropriate album folder. See EasyShare software Help for details.

Sharing your pictures

Press the Share button to “tag” your pictures/videos.
When they are transferred to your computer, you can share them.


 Print (page 33)
 Email (page 34)
 Favorites (page 35) for easy organization on your computer and for sharing on your camera

When can I tag my pictures and videos?

Press the Share button to tag pictures/videos:

- Any time. (The most recent picture/video taken is then displayed.)
- Just after you take a picture/video, during quickview (see [page 5](#)).
- After pressing the Review button.

Tagging pictures for printing

- 1 Press the Share button. Press ◀/▶ to locate a picture.
- 2 Press ▲/▼ to highlight Print , then press the OK button.*

3 Press ▲/▼ to select the number of copies (0-99). Zero removes the tag for that picture.

Optional: You can apply a print quantity to other pictures. Press ◀/▶ to locate a picture. Press ▲/▼ to change the print quantity. Repeat until the desired print quantity is applied to pictures.

4 Press the OK button.

The Print icon  appears in the status area.

5 Press the Share button to exit the menu.

* To tag all pictures in the storage location, highlight Print All, press the OK button, then indicate the number of copies. Print All is not available in quickview. To remove print tagging for all pictures in the storage location, highlight Cancel Prints, then press the OK button. Cancel Prints is not available in quickview.

Printing tagged pictures

When you transfer the tagged pictures to your computer, Kodak EasyShare software print screen opens. For details, click the Help button in EasyShare software.

For more information on printing from your computer, printer dock, PictBridge enabled printer, or card, see [page 12](#).



NOTE: For the best 4 x 6 in. (10 x 15 cm) prints, set the camera to the 4.4 MP (3:2) print quality setting. See [page 23](#).

Tagging pictures and videos for emailing

First—on your computer

Use Kodak EasyShare software to create an email address book on your computer. Then copy up to 32 email addresses to the camera's internal memory. For details, click the Help button in EasyShare software.

Second—tag pictures/videos on your camera

- 1 Press the Share button. Press ◀/▶ to locate a picture/video.
- 2 Press ▲/▼ to highlight Email , then press the OK button.
The Email icon  appears in the status area.
- 3 Press ▲/▼ to highlight an email address, then press the OK button.

To tag other pictures/videos with the same address, press ◀/▶ to scroll through them. When the picture you want is displayed, press OK.

To send the pictures/videos to more than one address, repeat step 3 for each address.


Selected addresses are checked.

- 4 To remove a selection, highlight a checked address and press the OK button. To remove all email selections, highlight Clear All.
- 5 Press ▲/▼ to highlight Exit, then press the OK button.
- 6 Press the Share button to exit the menu.




Third—transfer and email


When you transfer the tagged pictures/videos to your computer, the Email screen opens and lets you send them to the addresses you specified. For details, click the Help button in Kodak EasyShare software.

Tagging pictures as favorites

You can preserve your favorite pictures in the Favorites  section of your camera's internal memory, then share them with friends and family.





NOTE: When you transfer pictures from your camera to your computer, all pictures (including favorites) are stored on your computer at full size. Favorite pictures - smaller copies of your originals - are loaded back to your camera, so you can share and enjoy more.

1. Tag pictures as favorites	<ol style="list-style-type: none"> 1 Press the Share button. Press ◀/▶ to locate a picture. 2 Press ▲/▼ to highlight Favorite , then press the OK button. <i>The Favorite icon  appears in the status area. To remove the tag, press the OK button again.</i> <p>Press the Share button to exit the menu.</p>
2. Transfer pictures to your computer	<ol style="list-style-type: none"> 1 To enjoy full functionality, load and use the EasyShare software that was packaged with this camera. (See page 11.) 2 Connect the camera to the computer using the USB cable (see page 12) or an EasyShare dock. <i>The first time you transfer pictures, the software helps you make choices about your favorite pictures. Then, your pictures are transferred to the computer. Favorite pictures (smaller versions of the originals) are loaded to the Favorites section of your camera's internal memory.</i>
3. View favorites on your camera	<ol style="list-style-type: none"> 1 Turn the Mode dial to Favorites . 2 Press ◀/▶ to scroll through favorites.

NOTE: The camera holds a limited number of favorites. Use Camera Favorites in the EasyShare software to customize the size of your camera Favorites  section. Videos tagged as favorites remain in the Favorites folder in the EasyShare software. For details, click the Help button in Kodak EasyShare software.



Optional settings

In Favorites mode, press the Menu button to access optional settings.

	Slide Show (page 28)		Remove all favorites (page 37)
	Multi-up (page 9)		Setup Menu (page 26)

NOTE: Pictures taken at the 4.4 MP (3:2) quality setting are displayed at a 3:2 aspect ratio with a black bar at the top of the screen.

Removing all favorites from your camera

- 1 Turn the Mode dial to Favorites .
- 2 Press the Menu button.
- 3 Highlight Remove Favorites , then press the OK button.

All pictures stored in the Favorites section of internal memory are removed. Favorites are restored the next time you transfer pictures to the computer.





 
- 4 Press the Menu button to exit the menu.

Preventing favorites from transferring to the camera

- 1 Open Kodak EasyShare software. Click the My Collection tab.
- 2 Go to the Albums view.
- 3 Click the Camera Favorites Album for your camera.
- 4 Click Remove Album.

The next time you transfer pictures from your camera to the computer, use the Camera Favorites Wizard/Assistant to either recreate your Camera Favorites Album or to turn off the Camera Favorites feature.

Printing and emailing favorites

- 1 Turn the Mode dial to Favorites . Press /  to locate a picture.
- 2 Press the Share button.
- 3 Highlight Print  or Email , then press the OK button.

NOTE: Favorites that were taken on this camera (not imported from another source) are good for prints up to 4 x 6 in. (10 x 15 cm).

5

Troubleshooting

Camera problems

Status	Solution
Camera does not turn on	<ul style="list-style-type: none"> ■ Remove battery and verify that it's the correct type, then reinsert it. ■ Insert a new or charged battery. ■ Connect the camera to a Kodak 3-volt AC adapter (sold separately), then try again. See page 51 for more battery information.
Camera does not turn off and the lens does not retract	
Camera buttons and controls do not function	
Lens does not extend when camera turns on or does not retract	<ul style="list-style-type: none"> ■ Confirm that the battery in camera is charged. ■ Turn camera off, then on again. (Lens does not extend in Favorites mode.) ■ If problem still exists, get help (page 43).
LCD is black or does not turn on	<ul style="list-style-type: none"> ■ Push the LCD button to change the display.
In Review, a blue or black screen is displayed instead of a picture	<ul style="list-style-type: none"> ■ Transfer the picture to the computer. ■ Transfer <i>all</i> pictures to the computer (page 11). ■ Take another picture. If problem continues, try internal memory and/or another memory card.
Pictures remaining number does not decrease after taking a picture	<ul style="list-style-type: none"> ■ Continue taking pictures. The camera is operating normally. (The camera estimates the number of pictures remaining after each picture is taken, based on picture size and content.)
Picture orientation is not accurate	<ul style="list-style-type: none"> ■ Set the Orientation Sensor to ON (page 27).

Status	Solution
Flash does not fire	<ul style="list-style-type: none"> ■ Check the flash setting and change as needed (page 17). <p>NOTE: The flash does not fire in all modes.</p>
Storage location is almost or entirely full	<ul style="list-style-type: none"> ■ Transfer pictures to the computer (page 11). Delete pictures from the card (page 10) or insert a new card. ■ Change image storage location to internal memory (page 25).
Battery life is short	<ul style="list-style-type: none"> ■ Make sure the correct battery type is installed (page 1). ■ Wipe the contacts with a clean, dry cloth before inserting a battery in the camera. ■ Insert a new or charged battery.
You cannot take a picture	<ul style="list-style-type: none"> ■ Turn the camera off, then on again. Make sure the camera is not in Favorites mode. ■ Depress shutter button all the way (page 4). ■ Insert a new or charged battery (page 1). ■ Wait until the Ready light turns green before attempting to take another picture. ■ Memory full. Transfer pictures to the computer (page 11), delete pictures (page 10), change image storage location, or insert another card.
Error message appears on LCD	<ul style="list-style-type: none"> ■ Turn the camera off, then on again. ■ Remove memory card from the camera. ■ Remove the battery and wipe the contacts with a clean, dry cloth. ■ Insert a new or charged battery (page 1). ■ If problem still exists, get help (page 43).
Memory card not recognized or camera freezes with card.	<ul style="list-style-type: none"> ■ Card may be corrupted. Format card in camera (page 28). ■ Use another memory card.

Computer/connectivity problems

Status	Solution
Computer does not communicate with the camera	<ul style="list-style-type: none"> ■ Insert a charged battery (page 1). ■ Turn on the camera. ■ Make sure the proper USB cable is connected on camera and computer port (page 12). (If using an EasyShare dock, check all cable connections. Make sure the camera is seated on the dock.) ■ Make sure the EasyShare software is installed (page 11).
Pictures do not transfer to computer	<ul style="list-style-type: none"> ■ Click the Help button in the EasyShare software.
Slide Show does not run on an external video device	<ul style="list-style-type: none"> ■ Adjust the camera Video Out setting (NTSC or PAL, page 27). ■ Make sure the external device settings are correct (see the device's user's guide).

Picture quality problems

Status	Solution
Picture is not clear	<ul style="list-style-type: none"> ■ To automatically set exposure and focus, press the Shutter button halfway. When the Ready light turns green, press the Shutter button completely down to take the picture. ■ Clean the lens (page 52). ■ Make sure camera is not in Close-up mode if you are more than 21 in. (0.7 m) from your subject. ■ Place the camera on a flat, steady surface or use a tripod, especially in high-zoom settings or in low light.

Status	Solution
Picture is too dark or underexposed	<ul style="list-style-type: none"> ■ Reposition camera for more available light. ■ Use Fill flash (page 17) or change your position so light is not behind the subject. ■ Move so that the distance between you and the subject is within the effective flash range (page 17). ■ To automatically set exposure and focus, press the Shutter button halfway. When the Ready light turns green, press the Shutter button completely down to take the picture. ■ Adjust exposure compensation (page 22).
Picture is too light	<ul style="list-style-type: none"> ■ Reposition the camera to reduce the amount of available light. ■ Turn off the flash (page 17). ■ Move so that the distance between you and the subject is within the effective flash range (page 17). ■ To automatically set exposure and focus, press the Shutter button halfway. When the Ready light turns green, press the Shutter button completely down to take the picture. ■ Adjust exposure compensation (page 22).

Direct printing (PictBridge enabled printer) problems

Status	Solution
Cannot locate desired picture.	<ul style="list-style-type: none">■ Turn on the camera.■ Use the Direct print menu to change the image storage location.
The Direct print menu interface turns off.	<ul style="list-style-type: none">■ Press any button to redisplay the menu.
Cannot print pictures.	<ul style="list-style-type: none">■ Ensure that there is a connection between the camera and the printer (page 13).■ Ensure the printer and camera have power.
Camera or printer display an error message.	<ul style="list-style-type: none">■ Follow the prompts to resolve the issue.

6

Getting help

Helpful links

Camera

Get support for your product (FAQs, troubleshooting information, arrange for repairs, etc.)	www.kodak.com/go/c360support
Purchase camera accessories (camera docks, printer docks, lenses, cards, etc.)	www.kodak.com/go/c360accessories
Download the latest camera firmware and software	www.kodak.com/go/c360downloads
See online demonstrations of your camera	www.kodak.com/go/howto

Software

Get information on EasyShare software	www.kodak.com/go/easysharesw (or click the Help button in EasyShare software)
Get help with the Windows operating system and working with digital pictures	www.kodak.com/go/pcbasics

Other

Get support for other cameras, software, accessories	www.kodak.com/go/support
Get information on Kodak EasyShare printer docks	www.kodak.com/go/printerdocks
Get information on Kodak inkjet products	www.kodak.com/go/inkjet
Optimize your printer for truer, more vibrant colors	www.kodak.com/go/onetouch
Register your camera	www.kodak.com/go/register

Telephone customer support

If you have questions concerning this product, you may speak with a customer support representative:

Australia	1800 147 701
Austria	0179 567 357
Belgium	02 713 14 45
Brazil	0800 150000
Canada	1 800 465 6325
China	800 820 6027
Denmark	3 848 71 30
Ireland	01 407 3054
Finland	0800 1 17056
France	01 55 1740 77
Germany	069 5007 0035
Greece	00800 44140775
Hong Kong	800 901 514
India	91 22 617 5823
Italy	02 696 33452
Japan	03 5540 9002
Korea	00798 631 0024

Netherlands	020 346 9372
New Zealand	0800 440 786
Norway	23 16 21 33
Philippines	1 800 1 888 9600
Poland	00800 4411625
Portugal	021 415 4125
Singapore	800 6363 036
Spain	91 749 76 53
Sweden	08 587 704 21
Switzerland	01 838 53 51
Taiwan	0800 096 868
Thailand	001 800 631 0017
Turkey	00800 448827073
United Kingdom	0870 243 0270
United States	1 800 235 6325
Outside the US	585 726 7260
International Toll Line	+44 131 458 6714
International Toll Fax	+44 131 458 6962

For the most up-to-date listings, visit:

www.kodak.com/US/en/digital/contacts/DAInternationalContacts.shtml

Camera specifications

For more specifications, visit www.kodak.com/go/c360support.

CCD—1/2.5 in. CCD, 4:3 aspect ratio

Output image size—

5.0 MP: 2576 x 1932 pixels

4.4 MP (3:2): 2576 x 1716 pixels

4.0 MP: 2304 x 1728 pixels

3.1 MP: 2048 x 1536 pixels

1.8 MP: 1552 x 1164 pixels

Color display—2.0 in. (5 cm) color hybrid LCD; 110 K pixels

Color electronic viewfinder—LCD

Preview (LCD)—Frame rate: 24 fps

Taking lens—3X optical zoom, aspheric all-glass Retinar lens, f/2.7-5.2 (35 mm equivalent: 34-102 mm)

Lens protection—Built-in

Digital zoom—Combined zoom settings 3.2 to 15X in 0.2X increments. (Not supported for movie capture.)

Focus system—TTL-AF; auto, multi-zone, center-spot. Working range:

24 in. (0.6 m)-infinity @ wide

6.6 ft (2 m)-infinity @ telephoto

2-27.6 in. (5-70 cm) @ wide close-up

3.9-6.9 ft (1.2-2.1 m) @ telephoto close-up

Exposure metering—TTL-AE; Multi-pattern, Center-spot, Center-weighted

Exposure compensation—+/-2.0 EV with 1/3 EV step

Shutter speed—

Auto: 1/60-1/1400 sec.

Long time exposure: 0.7-8 sec.

ISO speed—

Auto: 80-160

Selectable: 80, 100, 200, 400, 800 (800 available only in Good picture quality.)

Electronic flash—Auto flash with photo sensor

Working range @ ISO 140: 2-11.8 ft (0.6-3.6 m) @ Wide; 2-6.9 ft (0.6-2.1 m) @ Tele

Flash modes—Auto, Fill, Red-eye, Off

Capture modes—Auto, Portrait, Sport, Landscape, Close-up, Video, Scene modes.

Burst mode—Maximum 5 pictures @ 2.4 fps (4 pictures @ ISO 400/800); AE, AF, AWB executed for first shot only

Video capture—


VGA (640 x 480) @ 24 fps

QVGA (320 x 240) @ 24 fps

Image file format—

Still: EXIF 2.21 (JPEG compression); file organization DCF

Video: QuickTime (CODEC MPEG4)

Image storage—Optional MMC or SD Card  (The SD logo is a trademark of the SD Card Association.)

Internal storage capacity—32 MB internal memory

Quickview—Yes

Video output—NTSC or PAL

Power—CRV3; 2-AA lithium; 2-AA Ni-MH; Kodak EasyShare Ni-MH rechargeable battery pack (KAA2HR); 3V AC adapter

Communication with computer—USB 2.0 (PIMA 15740 protocol), via USB cable, EasyShare camera dock or printer dock

PictBridge printer support—Yes

Self-timer—2 or 10 seconds

White balance—Auto, Daylight, Open Shade, Tungsten, Fluorescent

Color modes—High, Natural, Low, Black & White, Sepia

Date stamp—None, YYYYMMDD, MMDDYYYY, DDMMYYYY







Tripod mount—1/4 inch








 





 
Size—4 in. (102.5 mm) x 2.1 in. (65 mm) x 1.5 in. (38 mm) @ power off

Weight—10.1oz (286 g) without card or battery

Flash settings in each mode

Flash settings are pre-set for each picture-taking mode.

Capture modes		Default setting	Available settings
 AUTO	Auto	Auto*	Auto, Off, Fill Flash, Red-eye
	Portrait	Auto*	Auto, Off, Fill Flash, Red-eye
	Sports	Auto*	Auto, Off, Fill Flash, Red-eye
	Landscape	Off	Off
	Close-up	Off	Auto, Off, Fill Flash
	Video	Off	Off

Capture modes		Default setting	Available settings
	First burst	Off	Off
	Last burst	Off	Off
SCN Scene modes			
	Children	Auto*	Auto, Off, Fill Flash, Red-eye
	Party	Red-eye*	Auto, Off, Fill Flash, Red-eye
	Beach	Auto*	Auto, Off, Fill Flash, Red-eye
	Snow	Auto*	Auto, Off, Fill Flash, Red-eye
	Fireworks	Off	Off
	Flower	Off	Auto, Off, Fill Flash
	Self-Portrait	Red-eye*	Auto, Off, Fill Flash, Red-eye
	Backlight	Fill	Fill
	Night Portrait	Red-eye*	Auto, Off, Fill Flash, Red-eye
	Night Landscape	Off	Off
	Manner/Museum	Off	Off
	Text	Off	Auto, Off

* When you change to Auto or Red-eye in these modes, it becomes the default until you change it.

Storage capacities

File sizes vary. You may be able to store more or fewer pictures and videos.

Picture storage capacity

	Number of pictures				
	5.0 MP	4.4 MP (3:2)	4.0 MP	3.1 MP	1.8 MP
32 MB internal memory	17	19	21	27	43
32 MB SD/MMC	19	22	24	30	48
64 MB SD/MMC	39	44	48	60	97
128 MB SD/MMC	79	88	97	121	195
256 MB SD/MMC	159	178	196	242	391
512 MB SD/MMC	319	356	392	485	783

Video storage capacity

	Minutes/seconds of video	
	VGA (640 x 480)	QVGA (320 x 240)
32 MB internal memory	1 min. 47 sec.	3 min. 23 sec.
32 MB SD/MMC	1 min. 52 sec.	3 min. 46 sec.
64 MB SD/MMC	3 min. 59 sec.	7 min. 32 sec.
128 MB SD/MMC	7 min. 59 sec.	15 min. 4 sec.
256 MB SD/MMC	15 min. 58 sec.	30 min. 8 sec.
512 MB SD/MMC	31 min. 57 sec.	60 min. 17 sec.

Important safety instructions

- Read and follow these instructions before using Kodak products. Always follow basic safety procedures.
- The use of an accessory attachment that is not recommended by Kodak, such as an AC adapter, may cause fire, electric shock, or injury.
- If using this product in an airplane, observe all instructions of the airline.



RISK OF ELECTRIC SHOCK:

Do not disassemble this product; there are no user-serviceable parts inside. Refer servicing to qualified service personnel. Do not expose this product to liquid, moisture, or extreme temperatures. Kodak AC adapters and battery chargers are intended for indoor use only. The use of controls, adjustments, or procedures other than those specified herein may result in exposure to shock and/or electrical or mechanical hazards.

- When removing batteries, allow them to cool first; batteries may be hot.
- Read and follow all warnings and instructions supplied by the battery manufacturer.
- Use only batteries that are approved for this product.
- Keep batteries out of the reach of children.
- Do not allow batteries to touch metal objects, including coins. Otherwise, a battery may short circuit, discharge energy, become hot, or leak.
- Do not disassemble, install backward, or expose batteries to liquid, moisture, fire, or extreme temperature.
- Replace all batteries of a set at the same time. Do not mix new batteries with used ones. Do not mix rechargeable and non-rechargeable batteries. Do not mix lithium, Ni-MH, and Ni-Cd batteries together. Do not mix batteries of different chemistry types, grades, or brands. Failure to observe this precaution may cause leakage.
- Remove batteries when the product is stored for an extended period of time. In the unlikely event that battery fluid leaks inside the product, contact your local Kodak Customer Service representative.
- In the unlikely event that battery fluid leaks onto your skin, wash immediately with water and contact your local health provider. For additional health-related information, contact your local Kodak Customer Service representative.
- Dispose of batteries according to local and national regulations.


- If the battery contacts touch metal objects, the battery may short-circuit, discharge energy, become hot, or leak.
- Do not charge non-rechargeable batteries.

For more information on batteries, see

www.kodak.com/global/en/service/batteries/batteryUsage.jhtml

Battery life

Use these Kodak batteries. (Battery types are also molded into battery door.)

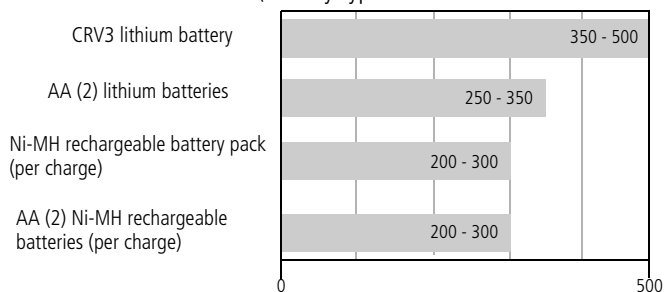

Battery life per CIPA testing method (Approx. number of pictures).
Actual life may vary based on usage.

We do not recommend or support alkaline batteries. For acceptable battery life, and to make sure your camera operates dependably, use the batteries listed.

Extending battery life

- Limit the following activities that quickly deplete battery power:
 - Reviewing your pictures on the LCD (see [page 8](#))
 - Using the LCD as a viewfinder (see [page 4](#))
 - Excessive use of the flash
- Dirt on the battery contacts can affect battery life. Wipe the contacts with a clean, dry cloth before loading batteries in the camera.

- Battery performance is reduced at temperatures below 41° F (5° C). When using your camera in cold weather, carry spare batteries and keep them warm. Do not discard cold batteries that do not work; when they return to room temperature, they may be usable.

Power-saving features

If no action for	The camera	To turn it back on
1 minute	Screen turns off.	Press the OK button.
10, 5, 3, 1 minutes (See Auto Power Off , page 27.)	Enters auto power off.	Press a button or insert/remove card.

Upgrading your software and firmware

Download the latest versions of the software included on the Kodak EasyShare software CD and the camera firmware (the software that runs on the camera). See www.kodak.com/go/c360downloads.

Additional care and maintenance

- If the camera has been subjected to inclement weather or you suspect water has gotten inside the camera, turn off the camera and remove the batteries and card. Allow all components to air-dry for at least 24 hours before using the camera again.
- Blow gently on the lens or LCD to remove dust and dirt. Wipe gently with a soft, lint-free cloth or an untreated lens-cleaning tissue. Do not use cleaning solutions unless designed specifically for camera lenses. Do not allow chemicals, such as suntan lotion, to contact painted surfaces.
- Service agreements may be available in your country. Contact a dealer of Kodak products for more information.

- For digital camera disposal or recycling information, contact your local authorities. In the US, visit the Electronics Industry Alliance Web site at www.eiae.org or the Kodak Web site at www.kodak.com/go/c360support.

Warranty

Limited warranty

Kodak warrants Kodak EasyShare digital cameras and accessories (excluding batteries) to be free from malfunctions and defects in both materials and workmanship for one year from the date of purchase.

Retain the original dated sales receipt. Proof of the date of purchase will be required with any request for warranty repair.

Limited warranty coverage

This limited warranty will be honored only within the geographical location that Kodak digital cameras and accessories were purchased.

Kodak will REPAIR or REPLACE Kodak EasyShare digital cameras and accessories if they fail to function properly during the warranty period, subject to any conditions and/or limitations stated herein. Such repair service will include all labor as well as any necessary adjustments and/or replacement parts. Such repair or replacement is the sole remedy under this warranty.

If replacement parts are used in making repairs, these parts may be remanufactured, or may contain remanufactured materials. If it is necessary to replace the entire product, it may be replaced with a remanufactured product.

Limitations

Request for Warranty service will not be accepted without proof of date of purchase, such as a copy of the original dated Kodak EasyShare digital camera or accessory sales receipt. (Always keep the original for your records.)

This warranty does not apply to the battery(s) used in digital cameras or accessories. This warranty does not cover circumstances beyond Kodak's control, nor problems caused by failure to follow the operating instructions in the Kodak EasyShare digital cameras and accessories User's Guides.

THIS WARRANTY DOES NOT APPLY WHEN FAILURE IS DUE TO SHIPPING DAMAGE, ACCIDENT, ALTERATION, MODIFICATION, UNAUTHORIZED SERVICE, MISUSE, ABUSE, USE WITH INCOMPATIBLE ACCESSORIES OR ATTACHMENTS, FAILURE TO FOLLOW KODAK'S OPERATION, MAINTENANCE OR REPACKING INSTRUCTIONS, FAILURE TO USE ITEMS SUPPLIED BY KODAK (SUCH AS ADAPTERS AND CABLES), OR CLAIMS MADE AFTER THE DURATION OF THIS WARRANTY.

Kodak makes no other express or implied warranty for this product. In the event that the exclusion of any implied warranty is ineffective under the law, the duration of the implied warranty will be one year from the purchase date.

The option of replacement is Kodak's only obligation. Kodak will not be responsible for any special, consequential or incidental damages resulting from the sale, purchase, or use of this product, regardless of the cause. Liability for any special, consequential or incidental damages (including but not limited to loss of revenue or profit, downtime costs, loss of the use of the equipment, cost of substitute equipment, facilities or services, or claims of your customers for such damages resulting from the purchase, use or failure of the product), regardless of cause or for breach of any written or implied warranty is expressly disclaimed and excluded herefrom.

Your rights

Some states or jurisdictions do not allow exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Some states or jurisdictions do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

 
This warranty gives you specific rights, and you may have other rights which vary from state to state or by jurisdiction.

Outside the United States and Canada

In countries other than the United States and Canada, the terms and conditions of this warranty may be different. Unless specific Kodak warranty is communicated to the purchaser in writing by a Kodak company, no warranty or liability exists beyond any minimum requirements imposed by law, even though defect, damage, or loss may be by negligence or other act.

Regulatory compliance

FCC compliance and advisory



This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed or used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: 1) reorient or relocate the receiving antenna; 2) increase the separation between the equipment and the receiver; 3) connect the equipment to an outlet on a circuit different from that to which the receiver is connected; 4) consult the dealer or an experienced radio/TV technician for additional suggestions.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Where shielded interface cables have been provided with the product or specified additional components or accessories elsewhere defined to be used with the installation of the product, they must be used in order to ensure compliance with FCC regulation.

Canadian DOC statement

DOC Class B Compliance—This Class B digital apparatus complies with Canadian ICES-003.

Observation des normes-Class B—Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Waste Electrical and Electronic Equipment labeling



In the European Union, the crossed-out dustbin symbol indicates that this product should not be discarded as municipal waste. Contact your local authorities or go to www.kodak.com for recycling program information.

VCCI Class B ITE

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づきクラスB情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。
取扱説明書に従って正しい取り扱いをして下さい。

English translation:

This is a Class B product based on the standard of the Voluntary Control Council for Interference from Information Technology Equipment (VCCI). If this is used near a radio or television receiver in a domestic environment, it may cause radio interference. Install and use the equipment according to the instruction manual.

MPEG-4

Use of this product in any manner that complies with the MPEG-4 visual standard is prohibited, except for use by a consumer engaging in personal and non-commercial activities.

Index

A

- A/V out, 29
- AA battery, loading, 1
- about picture, video, 30
- about this camera, 28
- accessories, 12
 - battery, 51
 - buying, 43
 - printer dock, 12
 - SD/MMC card, 3
- album
 - set, 25
 - tagging pictures, 31
- appendix, 45
- auto, 18
 - focus framing marks, 7
 - power-down, 52
- auto flash, 17
- auto focus control, 24
- auto power off, 27

B

- backlight, 19
- batteries
 - expected life, 51
 - extending life, 51
 - loading, 1
 - types, 51
- battery compartment, ii
- battery life, 51
- beach, 19
- blur, 5

- blur warning, 28
- burst button, i
- burst, using, 21
- button
 - burst, i, 21
 - delete, ii, 5
 - flash, 17
 - flash, flash button, i
 - info, ii
 - LCD/Info, ii
 - menu, ii
 - OK, ii
 - review, ii, 8
 - self-timer, self-timer button, i
 - Share, ii
 - shutter, i
 - telephoto, ii
 - wide angle, ii
 - zoom, 16

C

- cable
 - audio/video, 29
 - USB, 12
- camera screen
 - reviewing videos, 8
- camera sounds, 26
- caring for your camera, 52
- caution
 - formatting, 10
- cautions, 49
- children, 19

clock, setting, 2
color mode, 25
compatibility, dock, 15
copy pictures
 card to memory, 30
 memory to card, 30
 to computer, 11
cropping pictures, 30
CRV3 battery
 loading, 1
customer support, 44
customizing camera settings, 26

D

date setting, 2
date stamp, 27
DC-in, i
delete button, ii
deleting
 during quickview, 5
 pictures, videos, 10
 protecting pictures, videos, 10
digital zoom, using, 16
displaying slide show, 28
disposal, recycling, 53
dock
 connector, ii
 printer, 12
dock compatibility, 15
doing more with your camera, 16
download pictures, 11

E

EasyShare software

installing, 11
emailing pictures, videos, 34
expected battery life, 51
exposure
 long time, 25
 metering, 24
exposure bracketing, 22
exposure compensation, 22
external video device
 viewing pictures, videos, 29

F

favorites
 removing, 37
 settings, 36
 tagging, 35
fill flash, 17
fireworks, 19
firmware, upgrading, 52
flash
 settings in each mode, 47
flash off, 17
flash settings, 17
flower, 19
focus
 framing marks, 7
 zone, 24
format, 28
formatting
 caution, 10

G

guidelines, battery, 51

H

help, 38
 web links, 43

I

icon
 blur, 5
icons
 picture-taking, 6
 reviewing pictures, 9
icons, mode dial, 18
image storage, 25
info button, ii
information
 about pictures, videos, 30
installing
 batteries, 1
 SD/MMC card, 3
 software, 11
internal memory
 storage capacity, 49
interval, slide show, 29
ISO speed, 24

K

Kodak EasyShare software
 upgrading, 52
Kodak web sites, 43

L

LCD, ii
LCD/Info button, ii
lens, i
 cleaning lens, 52
light sensor, i

liveview, 26
loading
 batteries, 1
 SD/MMC card, 3
 software, 11
long time exposure, 25
loop, slide show, 29

M

Macintosh, installing software on, 11
magnify picture, 8
maintenance, camera, 52
manner, 19
memory
 inserting card, 3
 storage capacities, 49
menu button, ii
microphone, i
mode dial, i, 18
modes
 auto, 18
 backlight, 19
 beach, 19
 children, 19
 fireworks, 19
 flower, 19
 manner, 19
 night landscape, 19
 night portrait, 19
 party, 19
 SCN, 18
 self-portrait, 19
 snow, 19
 text, 20

multi-up, 9

N

night landscape, 19

night portrait, 19

O

OK button, ii

online prints, ordering, 14

optical zoom, 16

orientation sensor, 27

P

party, 19

PictBridge printer, 13

picture

 magnify, 8

picture size, 23

pictures

 copying, 30

 cropping, 30

 deleting, 10

 emailing tagged, 34

 printing, 14

 protecting, 10

 reviewing, 8

 storage capacity, 49

 tagging, 31

 taking, modes, 18

 transfer, 11

picture-taking settings, 22

power

 auto off, 52

 camera, 2

power light, i

power off, 27

printer dock, 12

printing

 from a card, 14

 from computer, 14

 optimizing printer, 43

 order online, 14

 PictBridge, 13

 tagged pictures, 14

 with EasyShare printer dock, 12

problem-solving, 38

protecting pictures, videos, 10

Q

quickview

 using, 5

R

ready light, ii

recycling, disposal, 53

red-eye flash, 17

regulatory information, 55

removing favorites, 37

repair, 43

return, 26

review button, ii, 8

reviewing pictures

 as you take them, 5

 camera screen, 8

reviewing pictures, videos

 slide show, 28

reviewing videos

 camera screen, 8

running slide show, 28

S

- safety, 49
- scene modes, 19
- SCN, 18
- SD/MMC card
 - inserting, 3
 - printing from, 14
 - slot, ii
 - storage capacities, 49
- self-portrait, 19
- self-timer
 - with pictures, 20
- self-timer light, i
- service and support telephone numbers, 44
- setting
 - about, 28
 - album, 25
 - auto focus, 24
 - auto power off, 27
 - blur warning, 28
 - camera sounds, 26
 - color mode, 25
 - date and time, 2
 - date stamp, 27
 - exposure bracketing, 22
 - exposure compensation, 22
 - exposure metering, 24
 - focus zone, 24
 - image storage, 25
 - ISO, 24
 - liveview, 26
 - long time exposure, 25
 - orientation sensor, 27
 - picture size, 23
 - picture taking mode, 18
 - return, 26
 - self-timer, 20
 - setup menu, 26
 - sharpness, 25
 - sound volume, 27
 - video date display, 27
 - video out, 27
 - white balance, 23
- settings
 - flash, 47
 - picture taking, 22
- setup menu, 26
- setup mode, using, 26
- shaking hand, 5
- Share button, ii
- sharing pictures, videos, 33
- sharpness, 25
- shutoff, auto, 52
- shutter
 - problems, 39
 - self-timer delay, 20
- shutter button, i
- sleep mode, 52
- slide show
 - continuous loop, 29
 - interval, 29
 - problems, 40
 - running, 28
- snow, 19
- software
 - installing, 11
 - upgrading, 52

sound volume, 27
sounds, 26
speaker, ii
specifications, camera, 45
status
 blur, 5
storage capacity, 49
support, technical, 44

T

tagging
 favorites, 35
 for albums, 31
 for email, 34
 for print, 34
taking a picture, 4
taking a video, 4
telephone support, 44
telephoto button, ii
television, slide show, 29
text, 20
thumbnails, 9
time, setting, 2
timer, shutter delay, 20
transferring pictures, videos, 11
trash can, deleting, 5
tripod socket, ii
troubleshooting, 38
turning camera on and off, 2

U

upgrading software, firmware, 52
URLs, Kodak web sites, 43
USB cable, 12

USB, A/V out, ii

V

VCCI compliance, 56
video
 copying, 30
 date display, 27
 out, 27
 protecting, 10
 reviewing, 8
 storage capacities, 49
 viewing, 8
videos
 deleting, 10
 emailing tagged, 34
 transfer, 11
viewfinder, i, ii
viewing picture
 after taking, 5, 8
volume, 27

W

warnings, 49
warranty, 53
white balance, 23
wide angle button, ii
Windows OS-based computers
 installing software, 11
wrist strap, 1
wrist strap post, ii

Z

zoom
 digital, 16
 optical, 16