


# 1 Attach the strap, load the battery

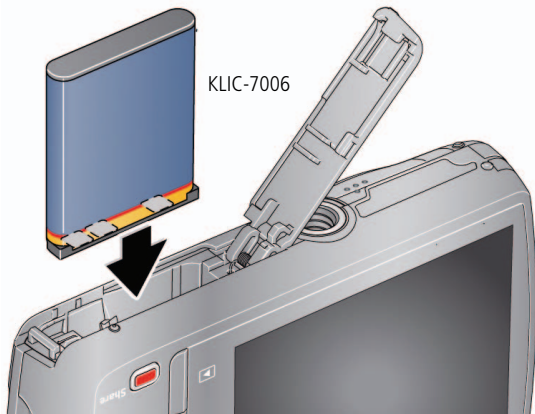


## 2 Charge the battery


Charge the battery whenever necessary.

If your package includes an adapter:


- 1 Turn off the camera.
- 2 Connect KODAK Camera USB Cable, Micro B / 5-Pin and charger. (Use only the cable included with this camera!)

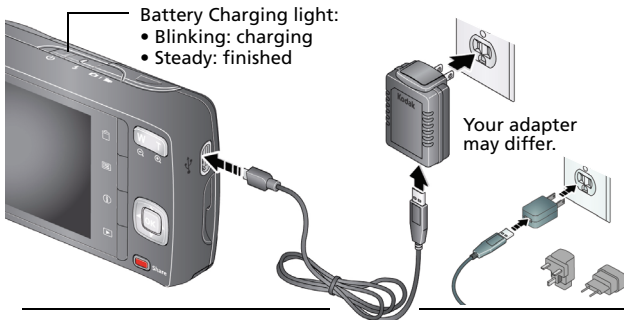

If your package includes a charger:

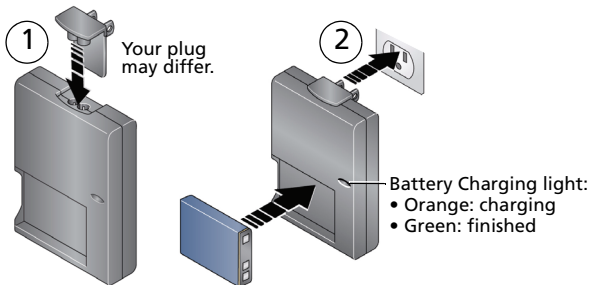

### 3 Turn on the camera

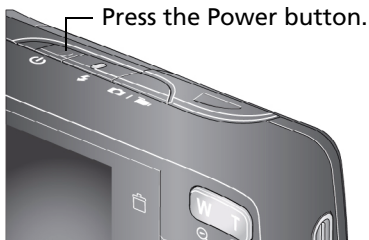

### 4 Set the language and date/time



Language:

▲▼ to change.

OK to accept.

Date/Time:

At the prompt, press OK.

▲▼ to change current field.

◀▶ for previous/next field.

OK to accept.

See the Extended user guide [www.kodak.com/go/m530support](http://www.kodak.com/go/m530support)

## 5 Take a picture



- 1 The camera turns on in Smart Capture mode. (If it's in a different mode, press the Mode button, then ▲ ▼ until the LCD displays Smart Capture mode. Then press OK.)



- 2 Compose the picture.

- 3 Press the Shutter button halfway to focus and set exposure.

When the framing marks turn green, press the Shutter button completely down.

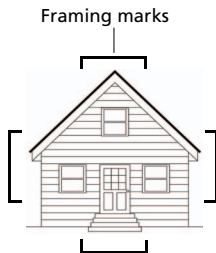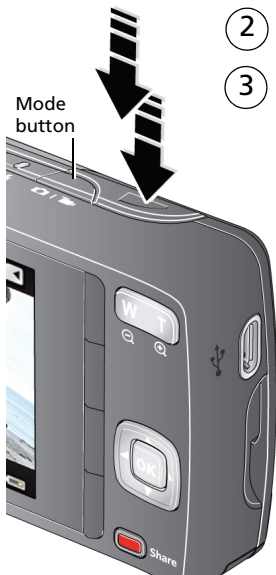

See other modes


See [page 10](#)

See the Extended user guide [www.kodak.com/go/m530support](http://www.kodak.com/go/m530support)

## 6 Review pictures/videos



Press the Review  button to enter/exit Review.

 View previous/next picture/video.

OK Play a video.


See the Extended user guide [www.kodak.com/go/m530support](http://www.kodak.com/go/m530support)

## 7 Download software, transfer pictures

Download KODAK Software—so it's easy to transfer and share pictures and videos.

Make sure the computer is connected to the Internet. When you connect the camera to the computer, the KODAK Software Downloader automatically runs. Follow the prompts to download and install KODAK Software.\*

- 1 Turn off the camera.
- 2 Use the KODAK Camera USB Cable, Micro B / 5-Pin to connect camera to computer. (Use only the cable included with this camera!)
- 3 Turn on the camera.

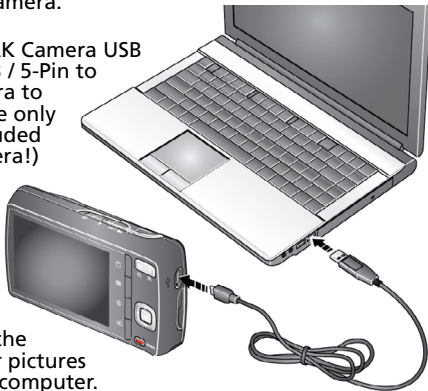

After the software is installed, follow the prompts to transfer pictures and videos to your computer.

- \* If the downloader does not run, find and launch it:
- WINDOWS OS: in My Computer
  - MAC OS: on your Desktop



**Download KODAK Software** [www.kodak.com/go/camerasw](http://www.kodak.com/go/camerasw)


**To use this camera on more than one computer** See the Extended user guide at [www.kodak.com/go/m530support](http://www.kodak.com/go/m530support)

## 8 Get help from your camera

Your camera offers a built-in Help system. It describes every setting for every menu choice.



- 1 Press the Menu  button, then highlight a menu choice.
- 2 Press the Info  button.

 Scroll through a Help topic.

### Keep learning about your camera!

Go to [www.kodak.com/go/m530support](http://www.kodak.com/go/m530support) for:


- the Extended user guide
- interactive troubleshooting and repairs
- interactive tutorials
- and more!

See the Extended user guide [www.kodak.com/go/m530support](http://www.kodak.com/go/m530support)

---


## Front View

---

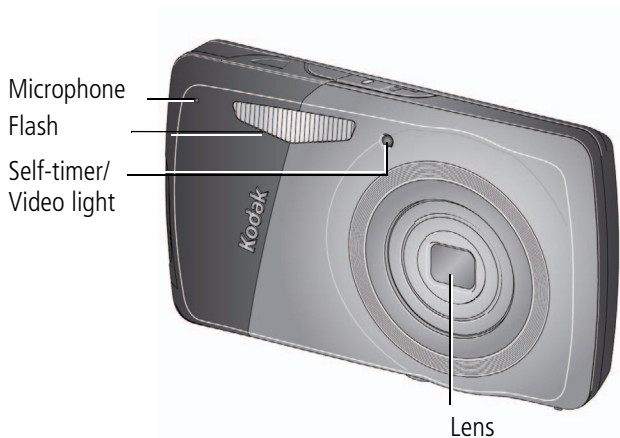




## Back View

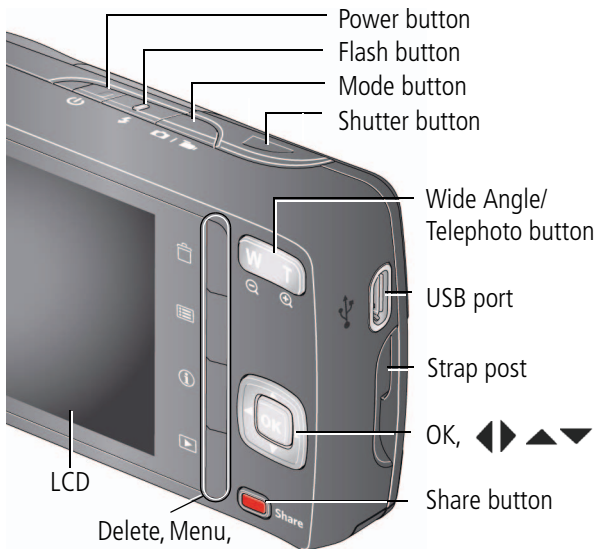

## 1

## Do more with your camera

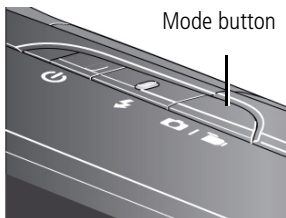

Mode button

Press the Mode button, then ▲▼ until the LCD displays the mode that best suits your subjects and surroundings, then press OK.

### Use this mode

### For



**Smart  
Capture**

General picture taking—excellent image quality and ease of use.



**Program**

Advanced picture taking—allows access to manual settings.



**Scene**

Point-and-shoot simplicity when taking pictures in practically any situation. (See [page 11.](#))



**Video**


Capturing video with sound. (See [page 11.](#))

## Adjust LCD brightness

To adjust the LCD brightness for your environment, see the Extended user guide ([www.kodak.com/go/m530support](http://www.kodak.com/go/m530support)).

## Take a video



- 1 Press the Mode button, then ▲▼ until the LCD displays Video , then press OK.
- 2 Press the Shutter button **completely down**, then release it. To stop recording, press and release the Shutter button again.

## Use Scene (SCN) modes

Choose a Scene mode—for great pictures in any situation.

- 1 Press the Mode button, then ▲▼ until the LCD displays SCN, then press OK.
- 2 Press ◀▶ ▲▼ to choose a mode and read its description.
- 3 Press OK (or let the description turn off) to enter the chosen Scene mode.

*The camera is now in the chosen scene mode. To read a mode description after it has turned off, press OK.*

---

SCN mode	For
----------	-----

Portrait	Full-frame portraits of people.
----------	---------------------------------


---

## *Do more with your camera*

<b>SCN mode</b>	<b>For</b>
<b>Sport</b>	Action pictures.
<b>Blur Reduction</b>	Reducing blur caused by camera shake or subject motion.
<b>Panorama L-R, R-L</b>	"Stitching" 2 or 3 pictures into 1 panoramic scene.
<b>Landscape</b>	Distant scenes.
<b>High ISO</b>	People indoors, in low-light scenes.
<b>Close-up</b>	Close range. Use available light instead of flash, if possible.
<b>Flower</b>	Close-ups of flowers or other small subjects in bright light.
<b>Sunset</b>	Subjects at dusk.
<b>Backlight</b>	Subjects that are in shadow or "backlit."
<b>Candle Light</b>	Subjects illuminated by candle light.
<b>Children</b>	Action pictures of children in bright light.
<b>Manner/Museum</b>	Quiet occasions. Flash and sound are disabled. For best results, place the camera on a steady surface or tripod.
<b>Text</b>	Documents. For best results, place the camera on a steady surface or tripod.
<b>Beach</b>	Bright beach scenes.


SCN mode	For
<b>Snow</b>	Bright snow scenes.
<b>Fireworks</b>	Fireworks. For best results, place the camera on a steady surface or tripod.
<b>Self-Portrait</b>	Close-ups of yourself. Assures proper focus and minimizes red eye.
<b>Night Portrait</b>	Reduces red eye of people in night scenes or low-light conditions.
<b>Night Landscape</b>	Distant scenery at night. Flash does not fire.
<b>Panning Shot</b>	Emphasizing horizontal motion, with a sharp subject and blurred background.

## Use the optical zoom

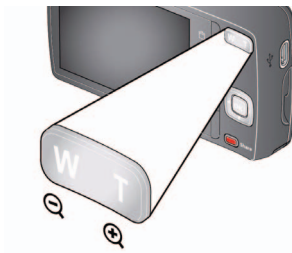



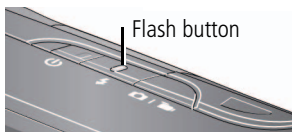


- 1 Use the LCD to frame your subject.
- 2 To zoom in, press Telephoto (T). To zoom out, press Wide Angle (W).
- 3 Take the picture.

## Use the flash



Press the Flash button repeatedly until the LCD displays the desired flash mode.

Flash modes		Flash fires
Auto		When the lighting conditions require it.
Fill (Flash On)		Every time you take a picture, regardless of the lighting conditions. Use when the subject is in shadow or is "backlit" (when the light is behind the subject). NOTE: (Not available in Smart Capture mode.)
Red-eye Reduction Choose a setting in the Setup menu.		A preflash fires, shrinking the eye pupil, before the picture is taken.
		A preflash does not fire; the camera corrects red eye. NOTE: When using digital correction, image processing takes longer than when using preflash.
Off		Never

## Use shortcuts

Your camera has a clean, uncluttered interface. For quick access to the most popular capture and review functions:




- 1 Press the Info **i** button.

*The shortcuts appear. To hide the shortcuts again, press **i**.*

- 2 Press ◀▶ to access functions like Exposure Compensation, Self-timer, and Auto focus. (You'll see different functions in different modes.)
- 3 Press ▲▼ to choose a setting.








## Delete pictures/videos

- 1 Press the Review  button.
- 2 Press   for previous/next picture/video.
- 3 Press the Delete button.
- 4 Follow the screen prompts.

## Use the menu button to change settings


**IMPORTANT:** *Your camera offers a built-in Help system. To get the most from your camera, [see page 7](#).*

You can change settings to get the best results from your camera. Some modes offer limited settings.


- 1 Press the Menu  button.
- 2 Press   to choose a tab:
  - **Capture/Video** for the most common picture- and video-taking settings
  - **Setup** for other camera settings
- 3 Press   to choose a setting, then press OK.
- 4 Choose an option, then press OK.



## Understand the picture-taking icons

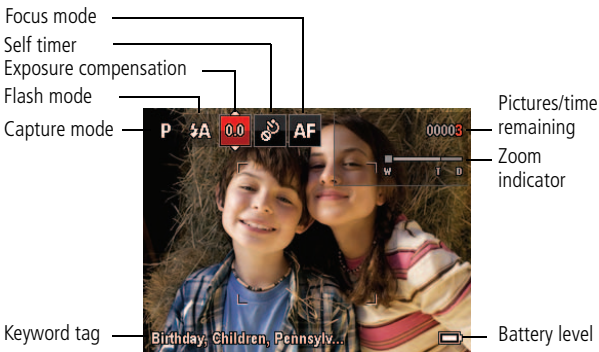

## Understand the review icons

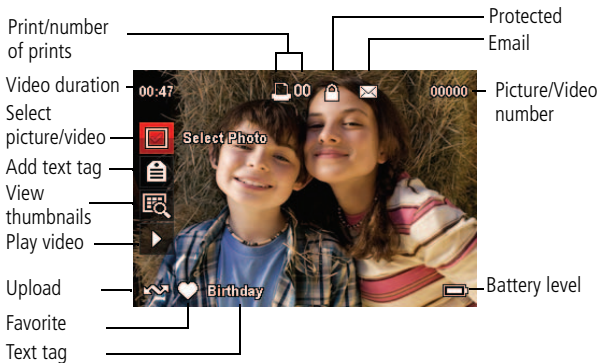

It's never been easier to share pictures on your favorite social networking sites.

**IMPORTANT:** *To use the camera's social networking features, you need to download KODAK Software. (See page 6.)*

1 Press the Review  button, then ◀▶ to find a picture.

2 Press the Share button.

*If it's your first time, a Help screen appears.*

3 Press ▲▼ to choose a networking site, then press OK.

*A check mark appears. Repeat this step to choose more sites. (You can press OK again to remove a check mark.)*

4 Press ▲▼ to choose Done, then press OK.

*The picture is displayed with the Share icon. When you transfer the picture to your computer, it will be sent to the networking site(s) that you chose.*












**Tip:** Do you send pictures to the same sites each time?

Find a picture, then press and hold the Share button for about 1 second.

*The camera applies the settings that you used previously and adds the Share icon to the picture.*





## Choose which social networking sites to display on your camera

You can show/hide networking sites on your camera so that only your favorite sites appear.

- 1 In Review, press the Menu  button.
- 2 Press   to choose the Setup tab, then   to choose Share Button Settings, then press OK.
- 3 Press   to choose a social networking site, then press   to choose Show or Hide. Repeat this step until you have chosen Show/Hide for each social network.
- 4 When finished, press   to choose Done, then press OK.  
*Only the sites that you specified are shown.*

## Manage email addresses, KODAK PULSE Digital Frames

You can add, edit, or delete email addresses and KODAK PULSE Digital Frames on your camera.

- 1 In Review, press the Share button. Press   to choose Manage Email Addresses (or Manage Frames), then press OK.
- 2 To add, press   to choose Add Email or Add Frame, then press OK. Use the on-screen keyboard to make the addition. (Example: JohnDoe@domain.com)

To edit, press ▲▼ to choose the address's nickname or the frame, then press OK. Use the on-screen keyboard.

To delete, choose Delete Email or Delete Frame, then press OK. Press ▲▼ to choose the address or frames, then press OK so that a check mark appears. Press ▲▼ to choose Delete, then press OK.

- 3 When finished, press ▲▼ to choose Done, then press OK.

*To return to picture-taking mode, press the Shutter button halfway down.*


## Tag pictures


Tag pictures to make them easy to find, later. You can tag pictures in 2 ways:

- **People**, and then find all pictures of "Mary."
- **Keywords**, and then find all pictures from "Dad's 60th Birthday."

## Tagging people

When you tag faces, your camera "learns" to recognize people by name. Then it matches names and faces in pictures you've taken *and* those you take in the future.

- 1 Press the Review  button, then ◀▶ to find a picture that contains faces.

- 2 Press the Menu  button. Press ▲▼ to choose Tag People, then press OK.
- 3 Press ▲▼ to choose Apply Tags, then press OK.
- 4 Press ▲▼ to choose an existing name, or New Name to add a new one (see [Using the keyboard, page 23](#)), then press OK.

*If more than one face is detected, a name or question mark is assigned to each detected face. To resolve an incorrect name or a question mark, press ▲▼ to select a face, then press OK.*



- 5 If prompted to Update People Tags, press ▲▼ to choose Yes, then press OK.

*Other pictures are scanned and updated with the name(s) you applied here. Press ◀▶ to add names to other pictures. When finished, press ▲▼ to choose Done, then press OK. To return to picture-taking mode, press the Shutter button halfway down.*

### **Tip: Are faces not always detected?**



If a face is turned sideways, is too distant, or if the contrast between face and background is insufficient, then the camera might not detect the face.

## Need to update a name?

What happens if you meet a new friend—James—but you already have pictures tagged with your old friend, James? You can:

- Tag the new James with “James Smith” and/or
- Update the old James to “James Monroe”













Here's how:

- 1 Press the Review  button.
- 2 Press the Menu  button. Press ▲▼ to choose Tag People, then press OK.
- 3 Press ▲▼ to choose Modify Names List, then press OK.
- 4 Press ▲▼ to choose the name you want to modify, then press OK.
- 5 Edit the name, press ▲▼ to choose OK, then press OK.

*To return to picture-taking mode, press the Shutter button halfway down.*

**Tip:** You can have up to 20 active names.

## Tagging with keywords







- 1 Press the Review  button, then   to find a picture.
- 2 Press the Menu  button. Press   to choose Keyword Tag, then press OK.
- 3 Press   to choose an existing keyword or New Keyword (see [Using the keyboard](#)) to add a new one, then press OK.
- 4 Press   to add keywords to other pictures. When finished, press   to choose Done, then press OK.

*To return to picture-taking mode, press the Shutter button halfway down.*

**Tip:** You can pre-choose a tag so that new pictures are assigned that tag (example: My Italy Trip). See the Extended user guide at [www.kodak.com/go/m530support](http://www.kodak.com/go/m530support).

## Using the keyboard




The keyboard appears when you need to add names or keywords.

- 1 Press     to choose a letter, then press OK.
- 2 When finished, press   to choose OK, then press OK.
- 3 If you've added a new name, the camera prompts you to update all faces to match assigned names. Choose Yes, then press OK.


*The name is assigned to all faces that match this one.*

## A smarter way to find your pictures

Once you have tagged pictures—by people or keywords—you can easily find them, later. For example, the camera can find all pictures that contain “Mary” or “Dad’s 60th Birthday.” (See [Tagging people, page 20](#) or [Tagging with keywords, page 23](#).)

- 1 Press the Review  button.
- 2 Press the Wide Angle (W) button to view pictures by thumbnails (or choose View Thumbnails shortcut).
- 3 Press  to choose a tab and sort pictures by All, Date, People, Favorite, or Keyword.
- 4 Press  to choose a picture or picture stack.

*Press Telephoto (T) to see pictures in a stack or to see an individual picture. Press Wide Angle (W) to see thumbnails or picture stacks. To return to picture-taking mode, press the Shutter button halfway down.*

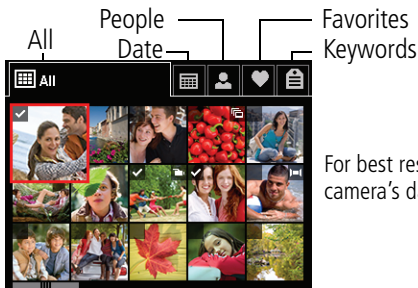

For best results, make sure the camera's date/time is current.



# 3

## Solve camera problems

### Camera problems

Status	Solution
Camera does not turn on or off	<ul style="list-style-type: none"><li>■ Make sure the battery is charged and installed correctly (<a href="#">see page 1</a>).</li></ul>
Camera buttons and controls do not function	
Flash does not fire	<ul style="list-style-type: none"><li>■ Check the flash setting, and change as needed (<a href="#">see page 14</a>).</li></ul> <p>NOTE: The flash does not fire in all modes.</p>
In Review, a blue or black screen is displayed instead of a picture	<ul style="list-style-type: none"><li>■ Transfer <i>all</i> pictures to the computer (<a href="#">see page 6</a>).</li><li>■ Take another picture.</li></ul>
You cannot take a picture	<ul style="list-style-type: none"><li>■ Turn the camera off, then on again.</li><li>■ Press the Shutter button all the way (<a href="#">see page 4</a>).</li><li>■ Insert a new or charged battery (<a href="#">see page 1</a>).</li><li>■ Memory is full. Transfer pictures to the computer (<a href="#">see page 6</a>), delete pictures (<a href="#">see page 16</a>), or insert another card.</li></ul>



## CAUTION:

Do not disassemble this product; there are no user-serviceable parts inside. Refer servicing to qualified service personnel. KODAK AC Adapters and Battery Chargers are intended for indoor use only. The use of controls, adjustments, or procedures other than those specified herein may result in exposure to shock and/or electrical or mechanical hazards. If the LCD breaks, do not touch the glass or liquid. Contact Kodak customer support.

- The use of an accessory that is not recommended by Kodak may cause fire, electric shock, or injury. For approved accessories, go to [www.kodak.com/go/accessories](http://www.kodak.com/go/accessories).
- Use only a USB-certified computer equipped with a current-limiting motherboard. Contact your computer manufacturer if you have questions.
- If using this product in an airplane, observe all instructions of the airline.
- When removing the battery, allow it to cool; it may be hot.
- Follow all warnings and instructions supplied by the battery manufacturer.
- Use only batteries approved for this product to avoid risk of explosion.
- Keep batteries out of the reach of children.
- Do not allow batteries to touch metal objects, including coins. Otherwise, a battery may short circuit, discharge energy, become hot, or leak.
- Do not disassemble, install backward, or expose batteries to liquid, moisture, fire, or extreme temperature.
- Remove the battery when the product is stored for an extended period of time. In the unlikely event that battery fluid leaks inside the product, contact Kodak customer support.
- In the unlikely event that battery fluid leaks onto your skin, wash immediately with water and contact your local health provider. For additional health-related information, contact your local Kodak customer support.
- See [www.kodak.com/go/reach](http://www.kodak.com/go/reach) for information about the presence of substances included on the candidate list according to article 59(1) of Regulation (EC) No. 1907/2006 (REACH).
- Dispose of batteries according to local and national regulations. Go to [www.kodak.com/go/kes](http://www.kodak.com/go/kes).
- Do not charge non-rechargeable batteries.  
For more information on batteries, see [www.kodak.com/go/batterytypes](http://www.kodak.com/go/batterytypes).

### Limited Warranty

Kodak warrants its digital cameras and accessories (excluding batteries) to be free from malfunctions and defects in both materials and workmanship for the warranty period

specified on your KODAK Product packaging. Retain the original dated sales receipt. Proof of purchase date is required with any request for warranty repair.

### Limited warranty coverage

Warranty service is only available from within the country where the products were originally purchased. You may be required to ship products, at your expense, to the authorized service facility for the country where the products were purchased. Kodak will repair or replace products if they fail to function properly during the warranty period, subject to any conditions and/or limitations stated herein. Warranty service will include all labor as well as any necessary adjustments and/or replacement parts. If Kodak is unable to repair or replace a product, Kodak will, at its option, refund the purchase price paid for the product provided the product has been returned to Kodak along with proof of the purchase price paid. Repair, replacement, or refund of the purchase price are the sole remedies under the warranty. If replacement parts are used in making repairs, those parts may be remanufactured, or may contain remanufactured materials. If it is necessary to replace the entire product, it may be replaced with a remanufactured product. Remanufactured products, parts and materials are warranted for the remaining warranty term of the original product, or 90 days after the date of repair or replacement, whichever is longer.

### Limitations

This warranty does not cover circumstances beyond Kodak's control. This warranty does not apply when failure is due to shipping damage, accident, alteration, modification, unauthorized service, misuse, abuse, use with incompatible accessories or attachments (such as third party ink or ink tanks), failure to follow Kodak's operation, maintenance or repacking instructions, failure to use items supplied by Kodak (such as adapters and cables), or claims made after the duration of this warranty. **Kodak makes no other express or implied warranty for this product, and disclaims the implied warranties of merchantability and fitness for a particular purpose.** In the event that the exclusion of any implied warranty is ineffective under the law, the duration of the implied warranty will be one year from the purchase date or such longer period as required by law. The option of repair, replacement, or refund is Kodak's only obligation. Kodak will not be responsible for any special, consequential or incidental damages resulting from the sale, purchase, or use of this product regardless of the cause. Liability for any special, consequential or incidental damages (including but not limited to loss of revenue or profit, downtime costs, loss of the use of the equipment, cost of substitute equipment, facilities or services, or claims of your customers for such damages resulting from the purchase, use, or failure of the product), regardless of cause or for breach of any written or implied warranty is expressly disclaimed. The limitations and exclusions of liability set forth herein apply to both Kodak and its suppliers.

### Your rights

Some states or jurisdictions do not allow exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Some states or jurisdictions do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. This warranty gives you specific rights, and you may have other rights which vary from state to state or by jurisdiction.

## Outside the United States and Canada

In countries other than the United States and Canada, the terms and conditions of this warranty may be different. Unless a specific Kodak warranty is communicated to the purchaser in writing by a Kodak company, no warranty or liability exists beyond any minimum requirements imposed by law, even though defect, damage, or loss may be by negligence or other act.

### FCC compliance and advisory

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. The KODAK High Performance USB AC Adapter K20-AM complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### Canadian DOC statement

**DOC Class B Compliance**—This Class B digital apparatus complies with Canadian ICES-003.

**Observation des normes-Classe B**—Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

### China RoHS

#### 环保使用期限 (EPUP)

在中国大陆, 该值表示产品中存在的任何危险物质不得释放, 以免危及人身健康、财产或环境的时间期限 (以年计)。该值根据表中所示规定的产品正常使用而定。

有毒有害物质或元素名称及含量标识表						
部件名称	有毒有害物质或元素					
	铅	汞	镉	六价铬	多溴联苯	多溴二苯醚
数码相机电路板元件	×	○	○	○	○	○
锂电池	×	○	○	○	○	○
交流变压器	×	○	○	○	○	○
电池充电器	×	○	○	○	○	○

○: 表示该有毒有害物质在该部件所有均质材料中的含量均在SJ/T 11363-2006规定的限量要求以下。  
 ×: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出SJ/T 11363-2006规定的限量要求。



USB 数据线

## VCCI Class B ITE

この装置は、情報処理装置等電波障害自主規制協議会 (VCCI) の基準に基づくクラスB情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。  
 取扱説明書に従って正しい取り扱いをして下さい。

## Australian C-Tick



N137

## Korean Class B ITE

B급 기기 (가정용 방송통신기기)	이 기기는 가정용(B급)으로 전자파적합등록을 한 기기로서 주로 가정에서 사용하는 것을 목적 으로 하며, 모든 지역에서 사용할 수 있습니다.
-----------------------	---

## Korean Li-Ion Regulatory

## 취급상의 주의사항

- < 경고 > 발열, 화재, 폭발 등의 위험을 수반할 수 있으니 다음 사항을
- 육안으로 식별이 가능할 정도의 부풀음이 발생된 전지는 위험할 수 있으므로 제조자 또는 판매자로 즉시 문의할 것
  - 지정된 정품 충전기만을 사용할 것
  - 화기에 가까이 하지 말 것 (전자레인지에 넣지 말 것)
  - 여름철 자동차 내부에 방치하지 말 것
  - 찜질방 등 고온다습한 곳에서 보관, 사용하지 말 것
  - 이불, 전기장판, 카펫 위에 올려 놓고 장시간 사용하지 말 것
  - 전원을 켜 상태로 밀폐된 공간에 장시간 보관하지 말 것
  - 전지 단자에 목걸이, 동전, 열쇠, 시계 등 금속 제품이 닿지 않도록 주의할 것
  - 휴대 기기, 제조 업체가 보증한 리튬2차전지 사용할 것
  - 분해, 압착, 관통 등의 행위를 하지 말 것
  - 높은 곳에서 떨어뜨리는 등 비정상적 충격을 주지 말 것.
  - 60℃ 이상의 고온에 노출하지 말 것
  - 습기에 접촉되지 않도록 할 것

## 기타정보

- 폐기지침 : 각 지방자치단체의 법규에 의거하여 폐기할 것
- 충전방법에 대한 권고지침
  - 1 분 충전지와 함께 사용할 디지털카메라 사용자 설명서의 충전설명 참조하세요.
  - 2 코닥 정품 충전기 및 카메라에서만 충전하세요. (타사 충전셋 사용 금지)

제조년월 : Y = Year(제조년도의 마지막 숫자), WW = Week(제조년도의 주)

제조년월 표시 예 : 901 = 9 (2009년), 01 (첫째주)

## Kodak

Eastman Kodak Company  
Rochester, New York 14650

© Kodak, 2009

Kodak, EasyShare, and Pulse are trademarks of Eastman Kodak Company.

4H6805\_en