

Wireless Networking Setup Guide

KODAK ESP All-in-One Printers

Setting up a wireless connection

Before you connect, you need:

- a wireless router.
- to determine whether your wireless router supports Wi-Fi Protected Setup (WPS).

NOTE: If you have specific questions about your router, see your router manufacturer's documentation.

Connecting to a wireless router (non-WPS)


Record your network information in the spaces below, using uppercase and lowercase letters.

Network Name (SSID): _____


Security String (case-sensitive): _____

NOTE: If you already set up your printer, you need to press **Home**, then press ▼ to select **Network Settings**, then **WiFi Setup Wizard**. Press **OK** after each selection.

1 Press ▼ to select **Wireless**, then press **OK**.

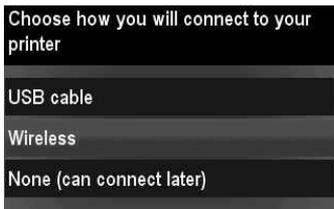

2 Press ▼ to select your network, then press **OK**.

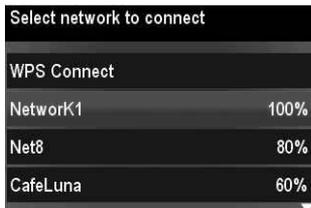A screenshot of a network selection menu. The title is "Select network to connect". Below the title is a section labeled "WPS Connect". Underneath, there is a list of three networks: "Network1" with a signal strength of "100%", "Net8" with "80%", and "CafeLuna" with "60%". A small downward-pointing arrow is visible at the bottom right of the list.

Select network to connect	
WPS Connect	
Network1	100%
Net8	80%
CafeLuna	60%

If you don't see your network in the list, select **Rescan for Wireless Networks**, then press **OK**.

NOTE: If the name of your network is not listed, make sure your wireless router is turned on and within range. If the name of your network is still not listed, go to www.kodak.com/go/inkjetnetworking.


- 3** If your network requires a password, use the LCD keyboard to enter your Security String. The Security String is case-sensitive.

On the control panel, press ▲, ▼, ◀ or ▶ to select the letters and numbers, using the correct uppercase and lowercase letters. Press **OK** after each character. When you are done, select **DONE**, then press **OK**.



Use the arrow keys to select the letters, numbers, and symbols. Press **OK** after each selection.

- 4** When the confirmation message appears, press **OK**.

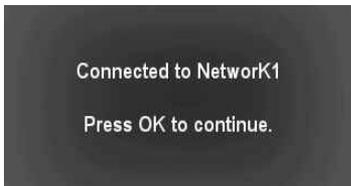

When the printer is successfully connected, the Wi-Fi status light is on.

NOTE: If you are unable to connect your printer, go to www.kodak.com/go/inkjetnetworking.

- 5 Install the KODAK All-in-One Printer Software on your computer. Follow the on-screen instructions to complete your setup.


If you installed the software before connecting to your network:

- For WINDOWS OS: Select **Start > Programs > Kodak > Kodak Printer Network Set-Up Utility** and follow the on-screen instructions.
- For MAC OS: Select **System Preferences**, then **Print & Fax** (under Hardware). Click the **+** sign to add a printer to your wireless network.


Connecting to a WPS wireless router

NOTE: If you already set up your printer, you need to press **Home**, then press ▼ to select **Network Settings**, then **WiFi Setup Wizard**. Press **OK** after each selection.

- 1 Press ▼ to select **Wireless**, then press **OK**.

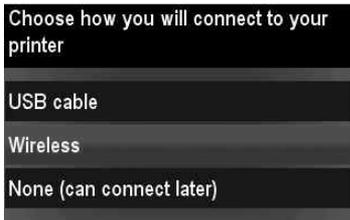

2 With **WPS Connect** selected, press **OK**.

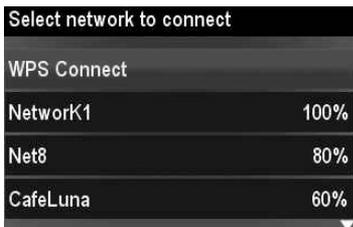

3 Select one of the following two methods of connecting:

IMPORTANT: Before you press **OK** on the printer, make sure you know where the router's button is, or where to enter the generated **PIN**.

Pressing a Button

NOTE: You will have two minutes to press or select the **WPS** button. It may be a button on the device or a virtual button in the device's software.

- a** With **Push Button Configuration** selected, press **OK**.
- b** Press or select the **WPS** button for your wireless router.

Entering a PIN

- a** Press ▼ to select **Generate WPS PIN**, then press **OK**.
- b** In your wireless router's software, locate the **PIN** screen.
- c** Enter the **PIN** you received from the **LCD** into the **PIN** screen.

- 4 When the confirmation message appears, press **OK**.



When the printer is successfully connected, the Wi-Fi status light is on.

NOTE: If you are unable to connect your printer, go to www.kodak.com/go/inkjetnetworking.

- 5 Install the KODAK All-in-One Printer Software on your computer. Follow the on-screen instructions to complete your setup.

If you installed the software before connecting to your network:

- For WINDOWS OS: Select **Start > Programs > Kodak > Kodak Printer Network Set-Up Utility** and follow the on-screen instructions.
- For MAC OS: Select **System Preferences**, then **Print & Fax** (under Hardware). Click the **+** sign to add a printer to your wireless network.

Kodak

© Eastman Kodak Company, 2010

Kodak and ESP are trademarks of Kodak.



1K7358

Printed in China